




**BLACK & DECKER®**

# INSTRUCTION MANUAL

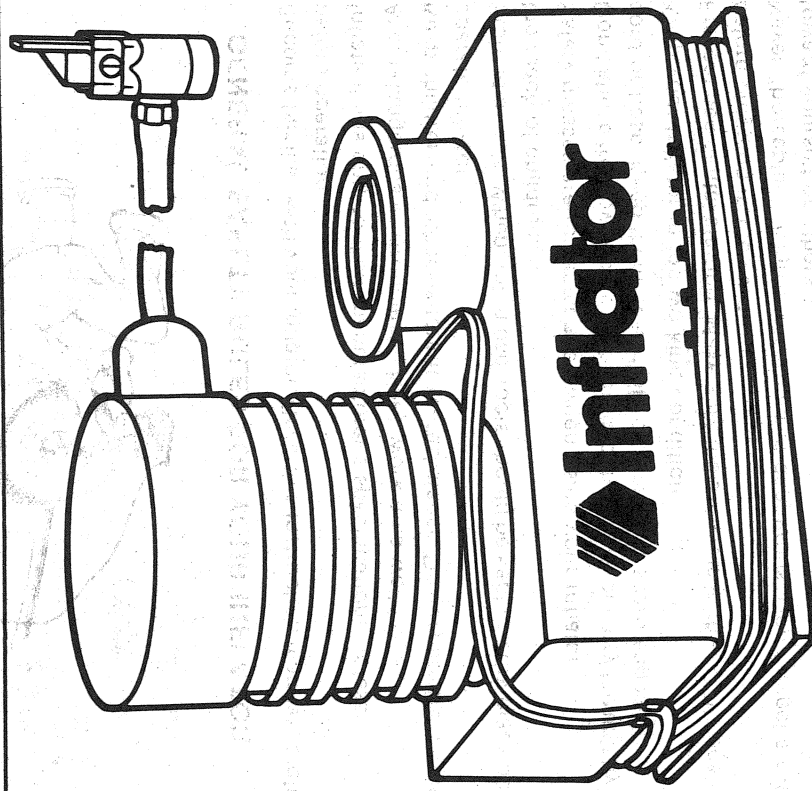


- 12 volt for use in most vehicles with standard cigarette lighter sockets.
- Convenient air source for automobile, motorcycle and bicycle tires, air shock absorbers, footballs and other recreational items requiring inflation.
- Powerful - (Max. Capacity 200 P.S.I.)
- 12 foot cord. • 30" air hose.

### IMPORTANT!

To assure product **SAFETY** and **RELIABILITY** repairs, maintenance and adjustments should be performed by **BLACK & DECKER** Service Centers or other qualified service organizations, always using **BLACK & DECKER** replacement parts.

# 9515 Inflator

NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES

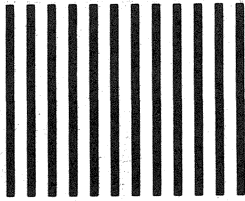

## BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 228 HUNT VALLEY, MD, U.S.A.

POSTAGE WILL BE PAID BY ADDRESSEE

**BLACK & DECKER (U.S.) INC.**  
User Services Department  
10 North Park Drive  
P.O. Box 857  
Hunt Valley, MD 21030-0857

**OPERATION**


(Attach air hose to item to be inflated before starting Inflator)  
 To start the Inflator, plug its cord into your car's cigarette lighter socket. To turn it off, unplug the cord.

**AIR HOSE AND UNIVERSAL VALVE ADAPTER**

Your Inflator is equipped with a 30" long hose and a permanently attached Universal Valve Adapter. To operate this valve adapter, position the lever straight up as shown in figure 3. Push the valve adaptor down over the threaded section of a tire valve, or one of the two nozzles provided with your Inflator as shown in figures 4 & 5.

**NOTE:** The Universal Inflator and the Needle Inflator shown in figure 4 are provided with your tool. See figure 6 for storage information for these two nozzles. When the adaptor is down all the way over the threads, press the lever down with your thumb as shown in figure 5. The adaptor is now locked in place. To release the adaptor, lift the lever straight up as shown in figure 3. Operate your Inflator only with the nozzles included or with standard tire valves.  
**NOTE:** Make sure that the Universal Valve Adaptor is firmly locked in place before turning the Inflator on.

figure 3

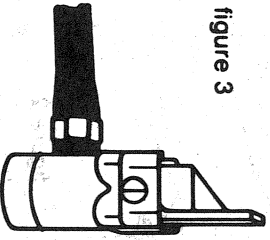

**NOTE THAT LEVER IS PUSHED DOWN ON THE SAME SIDE OF THE ADAPTOR AS THE AIR HOSE. SEE FIGURE 6.**

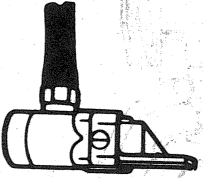


figure 5

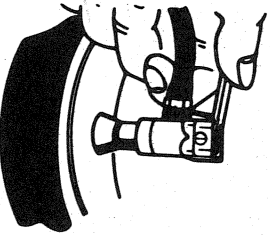


figure 4


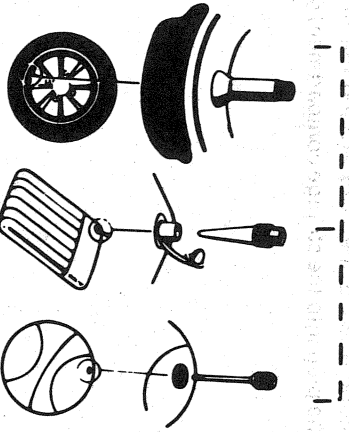


figure 6

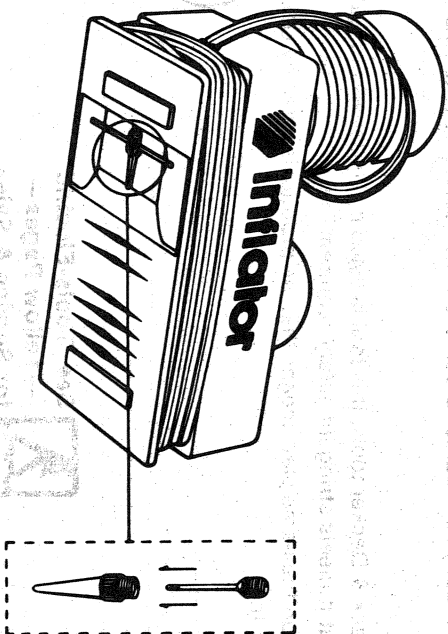

**AVERAGE INFLATION TIME**

Item	Size	PSI	Inflation Time
Bicycle Tire	26" x 1-7/8"	0-60 PSI	1 min., 30 sec.
Car Tire	P155 x 13	0-30 PSI	4 min., 30 sec.
Car Tire	P195 x 14	0-30 PSI	7 min.
Motorcycle Tire	3.50 S19	0-20 PSI	2 min.
Air Mattress	Single Person	—	9 min., 15 sec.