TABLE OF CONTENTS

WARRANTY	2	MAINTENANCE	18
SAFETY RULES			
FULL SIZE HARDWARE CHART	4	REPAIR PARTS ILLUSTRATION	20
CARTON CONTENTS	6	REPAIR PARTS LIST	21
ASSEMBLY	7	SLOPE GUIDE	23
OPERATION	17	PARTS ORDERING/SERVICE	Back Page

WARRANTY

CRAFTSMAN LIMITED WARRANTY

FOR ONE YEAR from the date of sale this product is warranted against defects in material or workmanship. WITH PROOF OF SALE a defective product will be replaced free of charge.

For warranty coverage details to obtain free replacement, visit the web page: www.craftsman.com/warranty This warranty does not cover expendable items that can wear out from normal use or deterioration within the warranty

period, including but not limited to tires, belts, exterior finishes or product labels.

This warranty does not apply to a product that is damaged or altered through transportation, misuse, abuse, corrosion,

accident, neglect modification or mishandling.

This warranty is void if this product is ever used while providing commercial services or if rented to another person. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears Brands Management Corporation, Hoffman Estates, IL 60179

DO NOT RETURN TO STORE for Missing Parts or Assembly Questions Call 1-866-576-8388 Attachment Hotline

The model number and serial number will be found on a decal attached to the bucket. You should record both the serial number and the date of purchase and keep in a safe place for future reference.	MODEL NUMBER: SERIAL NUMBER: DATE OF PURCHASE:	486.248476
---	--	------------