What's New



Place an 'X' in appropriate box.

Home Delivery In-Home Technicians Carry-In Technicians Technical Specialists

X

Craftsman® Smart LawnTM Connect Kit 25200

2/2/2017

Brand:

Craftsman

Division:

71


Source:

No Source number. Connect Kit is not repaired.

If the riding mower or zero turn radius mower is not already equipped with Smart lawn technology, the Craftsman Smart Lawn Connect Kit 25200 is required. Connect Kit sold separately wherever Craftsman riding mowers or zero turn radius mowers are sold. Works with most Craftsman Riding Mowers (including Zero Turn models) manufactured from 2010 to present when equipped with a Craftsman Smart Lawn Connect Kit (Item No. 25200). List of models that are excluded from using the Craftsman Smart Lawn Connect Kit 25200 is found after the following table.

Tractor Model #'s this kit can be installed on:

917.203800	917.254310	917,788,30
917.203801	917.254320	917 288631
917.203810	917.25433	17.238610
917.203820	917.255810	917.288662
917.203830	917 255 30	917.288671
917.203840	917.25 84	917.288672
917.203850	917.280080	917.289140
917.203860	917 280083	917.289213
917.20386	91 7.280084	917.289223
917. 03900	917.280350	917.289245
917.203951	917.288514	917.289253
917.203910	917.288515	917.289255
917.203911	917.288517	917.289272
917.203920	917.288520	917.289283
917.203921	917.288522	917.289344
917.203930	917.288526	917.289362
917.204021	917.288530	917.289452
917.204031	917.288533	917.289453
917.204080	917.288560	917.289472

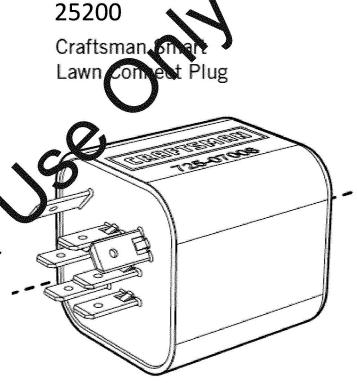

917.204090	917.	288561	917.2	289482			
917.204130	917.	288563	917.2	289550			
917.204170	917.	288570	917.2	289551			
917.250220	917.	288572	917.2	289904			
917.250222	917.	288573	917.2	289912			
917.250230	917.	288580	917.9	986411			
917.250231	917.	288582	917.9	986421			
917.250240	917.	288583	917.9	917.986431			
917.250241	917.	288611	917.9	986441			
917.250250	917.	288612	917.9	986451			
917.250811	917.	288613	917.2	280020			
917.250820	917.	288620	917.280023				
917.250830	917.	288623					
917.250841							
247.2037	247.20372 247.203721		247.20438		0438		
247.20372			3771 247.204400		4400		
247.203722 247.203723		247.20	203772 247.20442		4420		
		247.203773		247.202420			
247.203724		247.203774		247.204390			
247.203725		247.203775		247.2044 0			
247.203726		247.20	3776 247.204 10		4 10		
247.20373		247.20	0379 24, 20 4/0		440		
247.203731		247.203791		2 7.204470			
247.203732		247.20	247.20409		247.28880		
247.203733		247	247.294 247.289		3902		
247.203734		247-20	247-20-11		247.28904		
247.20374		2 7.20418		247.28905			
247.203741		2 7.204181		247.28911			
247.203 42		247.204182		247.28919			
247.2.3743		247.20419		247.28933			
247.2037 4		247.204191		247.28888			
24, 20375		247.204200		247.288881			
247.203751		247.20	247.204201		247.28980		
247.203752		247.204220		247.28981			
247.203753		247.20	4221 247.28984		3984		
247.203754		247.20	04240 247.28672		3672		
247.20376		247.20	4241	11 247.28901			
247.20376	51	247.25	5003				



Excludes Riding Mowers: 917.20401 - 917.20404 - 107.25004 - 107.25005 - 107.25006 - 107.25007.

Excludes ZTRs: 917.20414 – 127.28875 – 127.28876 – 127.28877.

Excludes Models with prefix 247 that do NOT include "Mow in Reverse" operating system.

Select Craftsman Riding Mower and Zero Turn radius mower models 247.20400, 247.20410, 917.27390, 917.27394, 247.27038, 247.27042, 247.27049, 247.27044, 247.27039, 247.27055, 247.27048, 247.27047, 917.27778, 917.27773, 917.27771, 917.27779, 247.27050, 247.27052, 247.27054 (Model number label found under the seat or on select Zero Turn radius models on the left side of the frame). These models have the Connect Kit installed at the factory.

Market Release:

2017

Training Planned

Home Delivery:

In-Home

Technicians:

Carry-In

Technicians:

Webinar - None


Webiliai - Noi

None

Product Over www.

Craftsman



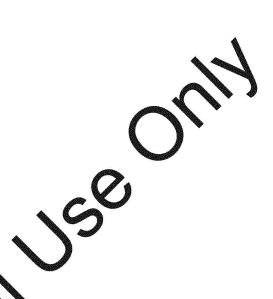

High Level Operation of Product:

CRAFTSMAN SMART. What lks directly to your mower using Bluetooth technology. It provides up to-date information about your mower's battery, blades, air filter and engine oil, then notifies you whenever something needs attention, making maintenance simple. Smart Lawn provides you model-specific owner's that talk and engine operating manuals viewable in the app.

The 'pp's 'eriodic Maintenance section provides tips and instructions on servicing your mower after every 10, 25, 50 and 100 hours of use — plus at the beginning and end of mowing season.

CRAFTSMAN SMART LAWN also provides fast access to replacement parts to keep your mower running smoothly. Order parts and accessories online, or use the Store Locator to find nearby retailers.

CRAFTSMAN SMART LAWN also delivers the latest weather forecast and tracks time since your last mow. The app lets you know the best days to mow — and how much time you have left until sundown.

Find the app by searching for "Craftsman smart lawn"

Tractor does not connect to Wi Fi in home.

Tractor makes Bluetooth connection to member's mobile device.

Member must have a CraftsmanClub or ShopYourWay account.

For installation instructions go to:

https://club.craftsman.com/blog/craftsman-smart-lawn-connect-kit

Special Features:

CRAFTSMAN SMART LAWN

MAINTENANCE MADE EASY

- + Never get surprised by a dead mower, thank to bat ery life monitoring.
- + Keep your oil fresh for a healthy engine and a mooth ride.
- + Keep your blades sharp for clean, efficient grass cutting.
- + Check the condition of your air filter an your engine running right.

ANSWERS AT YOUR FINGERTIPS

- + Order parts for your mower light from your phone.
- + Do it yourself with maintenance deos and how-to instructions.
- + Find your nearest retailer to check out parts and accessories in-store.

KNOW WHEN TO MOW

- + Weather at a clarice shows you whether the day will be cloudy or sunny.
- + See how man, hours you have before sunset to stay on schedule.
- + Check out the 5-day forecast and pick your best day to mow.
- + Track now many days it's been since your last cut.

Special Features -What's N w o Using a smart phone to communicate via Bluetooth with the tractor enables member to be reminded when service should be performed.

Technician:

For additional support or questions, please contact the Craftsman® Customer Hotline at 1-888-331-4569. When prompted, Press 2 and then Press 1.

Frequently Asked Questions

What to check for before connecting to Craftsman Smart Lawn app?

- 1. Set your mower to its "run" position
- 2. Keep your device within 150 ft of the mower
- 3. Make sure your device's Bluetooth is turned on
- 4. Make sure your mower's battery is fully charged
- 5. If your mower requires a Connect Kit, make sure it is installed

How many mowers can I connect to with Craftsman Small Law?

Craftsman Smart Lawn allows you to connect multiple no very to the app if desired. There is no hard limit to the number of the very you can connect. How can I tell if my mower is compatible with Craftsi an Smart Lawn? COMPATIBILITY NOTICE: This app works directly with select Craftsman Riding Mower and Zero Turn radius mower models 247.204000, 247.204100, 917.27390, 917.27394, 247. 7.03), 247.27042, 247.27042, 247.27044, 247.27039, 27055, 247.2 049 247.27047, 917.27778, 917.27773, 917.27771, 917.27779, 247.27 050, 247.27052, 247.27054 (Model number label found under th) seat or on select Zero Turn radius models on the left side of the frame).

If the riding mower or two jurn radius mower is not already equipped with Smart lawn technology, the Craftsman Smart Lawn Connect Kit 25200 is required. Connect it sold separately wherever Craftsman riding mowers or zero turn radius powers are sold. Works with most Craftsman Riding Mowers (it clading Zero Turn models) manufactured from 2010 to present when equipped with a Craftsman Smart Lawn Connect Kit (Item No. 252 0). Exclusions noted below:

Excludes Riding Mowers: 917.20401 - 917.20404 - 107.25004 - 107.25005 - 107.25006 - 107.25007.

Excludes ZTRs: 917.20414 – 127.28875 – 127.28876 – 127.28877.

Excludes Models with prefix 247 that do NOT include "Mow in Reverse" operating system.

Please check back for updates and added compatibility.

Visit **Craftsman.com/connectkit** for installation guides, riding mower capability, and how to videos

What is the Craftsman Smart Lawn app?

The Craftsman Smart Lawn app is a digital assistant for helping you use and maintain your Craftsman Riding Mower. It provides alerts, tutorials, weather info and other resources to help you keep your Riding Mower running smoothly.

How does Craftsman Smart Lawn work?

Craftsman Smart Lawn receives data directly from your Riding Mower using Bluetooth technology, providing up-to-date information about your Riding Mower's key replaceable components, such as the battery, oil, hower blades and air filter.

Why should I buy a Craftsman Smart Lawn-enable on wer:

Bluetooth-equipped Riding Mowers that are compatible With Smart Lawn allow you to track the number of hours your Riday Mower has been running, allowing you to see when it's time to replace your battery, oil, mower blades and air filter.

How much does the Craftsman Smart Lawn service cost?

Apart from the cost of the Riding Mo ver and your mobile device's data plan, there is no charge for using the Smart Lawn service.

How much does the Cafes pan Smart Lawn app cost?

The app is free for ac viscad in both the Apple App Store and Google Play Store.

What type of devices can I use with Craftsman Smart Lawn?

Craftsman Smart Lawn requires a device equipped with Bluetooth LE in order to connect with your Riding Mower. This includes most iOS and A dreid devices sold since 2011. Smart Lawn can be used with an Apple device running iOS 9 or higher or an Android device running operating system version 4.4 or higher.

How do I set up my Craftsman Smart Lawn app?

Once you've created your account, the app will prompt you to enter your Riding Mower's model number and serial number barcodes. Next put your Riding Mower in the "ON" position or push button pressed for push button models. You can also have your engine fully running and it will attempt to pair with the mower via Bluetooth. Once the Riding Mower is synced, it should connect with your Riding Mower automatically anytime the Riding Mower is running and your device is in range. It doesn't need to be running, but it needs to be in the "ON" position, or push button start pressed.

45412-HOF Page 7 of 9 Revision 2, 10/2013

How far from my Riding Mower should my device be when using the app? You should be within 150 feet of your Riding Mower with its engine running when you want to update your Riding Mower's runtime statistics. Other app features (weather, how-to content, etc.) can be used at any time, regardless of how close to you are to your mower, whether it is currently running or not.

What do I do if I get a new Riding Mower?

Assuming your new Riding Mower is compatible with Craftsman Smart Lawn, you can connect a new Riding Mower to the app in the same manner as you did your first Riding Mower. Your account displays the ist of currently connected mowers, with the option to add an other.

How do I create my Craftsman Smart Lawn account?

Smart Lawn is designed to be compatible with your existing Craftsman Club (ShopYourWay) account. Simply enter your Craftsman Club email and password to create your Smart Lawn account.

If you don't have a Craftsman Club ccount, you can create a new one using the app.

How can I find my Riding Mower's model and serial number to scan them?

The barcode sticke is researching Mower's model and serial number is located below you. Riding Mower's seat or in select zero turn mower models on the left side of the frame.

What do is it mean when there are negative numbers on the Craftsman Smart Lywn dashboard?

A pegative number denotes that your Riding Mower is overdue for a particular service (Battery Replacement, Oil Change, Blade Replacement or Air Filter Replacement). The exact number indicates the number of hours past due you are for that service.

How many Riding Mowers can I connect to with Craftsman Smart Lawn? Craftsman Smart Lawn allows you to connect multiple Riding Mowers to the app if desired. There is no hard limit to the number of Riding Mowers you can connect.

What do I do if Craftsman Smart Lawn cannot find my Riding Mower? Verify that you are trying to connect a Riding Mower that is compatible, and ensure you have followed the below steps to connect:

- 1. Set your Riding Mower to its "run" position
- 2. Keep your device within 150 ft. of the Riding Mower

- 3. Make sure your device's Bluetooth is turned on
- 4. Make sure your Riding Mower's battery is fully charged
- 5. If your Riding Mower requires a Connect Kit, make sure it is installed securely

For additional support or questions, please contact the Craftsman® Customer Hotline at 1-888-331-4569. When prompted, Press 2 and then Press 1.

Sinternaliuse

Universal Keywords: Div71 Src917 Husqvarna Mechtech

Document Specific Keywords: Whatsnew

Date: 020617

Document Name: 25200

Subject: Husqvarna Craftsman Smart Lawn Connect Kit 25200 Whats New Models: 917.203800 917.254310 917.288630 917.203801 917.254320 917.288631 917.203810 917.254330 917.288610 917.203820 917.255810 917.288662 917.203830 917.255830 917.288671 917.203840 917.255840 917.288672 917.203850 917.280080 917.289140 917.203860 917.280083 917.289213 917.203861 917.280084 91 289223 917.203900 917.280350 917.289245 917.203901 917.288514 917.2892 917.288515 917.289255 917.203911 917.288517 917.289272 917.20 917.289283 917.203921 917.288522 917.289344 917.203930 9 917.204021 917.288530 917.289452 917.204031 917.288533 917.288560 917.289472 917.204090 917.288561 917.289482 9 917.289550 917.204170 917.288570 917.289551 917.250220 917.288572 917.289904 917.250222 917.288573 917.289912 917.250230 917.288 **80 9**17.986411 917.250231 917.288582 917.986421 917.250240 917.288583 017 993 31 917.250241 917.288611 917.986441 917.250250 917.288612 917.986451 917.250811 917.288613 917.280020 917.250820 917.288620 917.280023 917.250830 917.288623 917.250841 247.20372 247.20377 247.20438 247.203721 247.20371 247.204400 247.203722 247.203772 247.204420 247.203723 247.203773 247.203724 247.203724 247.203774 247.204390 247.203725 247.203775 247.204430 **7. 027**26 247.203776 247.204440 247.20373 247.20379 247.204450 247.203731 47.293791 247.204470 247.203732 247.20400 247.28880 247.203733 247.20410 247.28902 247.203734 247.20411 247.28904 247.20374 247.20418 247.28505 247.203741 247.204181 247.28911 247.203742 247.204182 247.28919 247.203743 247.20419 247.28933 247.203744 247.204191 247.28888 247.20375 247.294200 247.288881 247.203751 247.204201 247.28980 247.203752 247.2042 0 247.28981 247.203753 247.204221 247.28984 247.203754 247.204240 247.28672 247.20376 247.204241 247.28901 247.203761 247.25003 **204** 0 917.27390 917.27394 247.27038 247.27042 247.27049 247.20400,24 247.27044 2 **7.2** 39 247.27055 247.27048 247.27047 917.27778 917.27773 917.27 71 917.27779 247.27050 247.27052 247.27054 917204090 917288561 917289483 ¶7204130 917288563 917289550 917204170 917288570 917289551 917250220 917288572 917289904 917250222 917288573 917289912 917250230 917288580 917986411 917250231 917288582 917986421 917250240 917288583 917986431 917250241 917288611 917986441 917250250 917288612 917986451 917250811 917288613 917280020 917250820 917288620 917280023 917250830 917288623 917250841 24720372 24720377 24720438 247203721 247203771 247204400 247203722 247203772 247204420 247203723 247203773 247202420 247203724 247203774 247204390 247203725 247203775 247204430 247203726

247203776 247204440 24720373 24720379 247204450 247203731 247203791 247204470 247203732 24720400 24728880 247203733 24720410 24728902 247203734 24720411 24728904 24720374 24720418 24728905 247203741 247204181 24728911 247203742 247204182 24728919 247203743 24720419 24728933 247203744 247204191 24728888 24720375 247204200 247288881 247203751 247204201 24728980 247203752 247204220 24728981 247203753 247204221 24728984 247203754 247204240 24728672 24720376 247204241 24728901 247203761 24725003 24720400 24720410 91727390 91727394 24727038 24727042 24727049 24727044 24727039 24727055 24727048 24727047 91727778 91727773 91727771 91727779 24727050 24727052 24727054 whatsnels

Sinternalise