## **TABLE OF CONTENTS**

ACCESSORIES	2	SERVICE AND ADJUSTMENTS	28
SAFETY RULES			
FULL SIZE HARDWARE CHART			
CARTON CONTENTS			
ASSEMBLY	7	REPAIR PARTS LIST	31,33,34
OPERATION	26	SLOPE GUIDE	35
MAINTENANCE	27	PARTS ORDERING/SERVICE	BACK COVER

## **WARRANTY**

## **ONE YEAR FULL WARRANTY**

When operated and maintained according to the instructions supplied with it, if this Snow Thrower fails due to a defect in material or workmanship within one year from the date of purchase, call 1-888-331-4569 to arrange for free repair (or replacement if repair proves impossible).


If this product is used for commercial or rental purposes, this warranty applies for only 90 days from the date of purchase.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., D817WA, Hoffman Estates, IL 60179

## **ACCESSORIES AND ATTACHMENTS**

These and other accessories are recommended for use with your unit. Call 1-888-331-4569 to find out if they are available. If available, they may be purchased at most Craftsman outlets or by calling 1-888-331-4569.

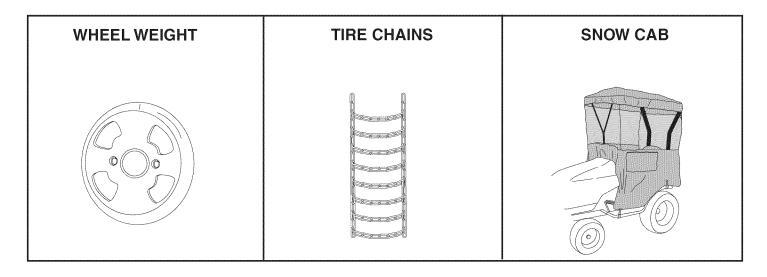

The model number and serial numbers will be found on a decal attached to the snow thrower.

You should record both the serial number and the date of purchase and keep in a safe place for future reference.

MODEL NUMBER: 486.248373

SERIAL NUMBER: \_\_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_\_