

If you have questions or comments, contact us.
Pour toute question ou tout commentaire, nous contacter.
Si tiene dudas o comentarios, contáctenos.

1-800-4-DEWALT • www.dewalt.com

INSTRUCTION MANUAL
GUIDE D'UTILISATION
MANUAL DE INSTRUCCIONES

INSTRUCTIVO DE OPERACIÓN, CENTROS DE SERVICIO Y PÓLIZA DE GARANTÍA.
ADVERTENCIA: LÉASE ESTE INSTRUCTIVO ANTES DE USAR EL PRODUCTO.

DEWALT®

DP65 Heavy-Duty Professional Spray Gun DP65 Pistolet de pulvérisation professionnel de service intensif DP65 Pistola pulverizadora profesional para trabajo pesado

DeWALT Industrial Tool Co., 701 Joppa Road, Baltimore, MD 21286
(DEC06) Form No. 90510661 DP65 Copyright © 2006 DeWALT

The following are trademarks for one or more DeWALT power tools: the yellow and black color scheme; the "D" shaped air intake grill; the array of pyramids on the handgrip; the kit box configuration; and the array of lozenge-shaped humps on the surface of the tool.

Definitions: Safety Guidelines

The definitions below describe the level of severity for each signal word. Please read the manual and pay attention to these symbols.

DANGER: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION: Used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

IF YOU HAVE ANY QUESTIONS OR COMMENTS ABOUT THIS OR ANY DEWALT TOOL, CALL US TOLL FREE AT: 1-800-4-DEWALT (1-800-433-9258)

IMPORTANT SAFETY INSTRUCTIONS

WARNING: For your own safety, read the tool instruction manual before using any accessory. Failure to heed these warnings may result in personal injury and serious damage to the pressure washer and the accessory. When servicing this tool, use only identical replacement parts.

WARNING: The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Wash hands after handling.




⚠ DANGER: RISK OF FLUID INJECTION AND LACERATION

WHAT CAN HAPPEN

HOW TO PREVENT IT

- Your pressure washer operates at fluid pressures and velocities high enough to penetrate human and animal flesh, which could result in amputation or other serious injury. Leaks caused by loose fittings or worn or damaged hoses can result in injection injuries. DO NOT TREAT FLUID INJECTION AS A SIMPLE CUT! See a physician immediately!

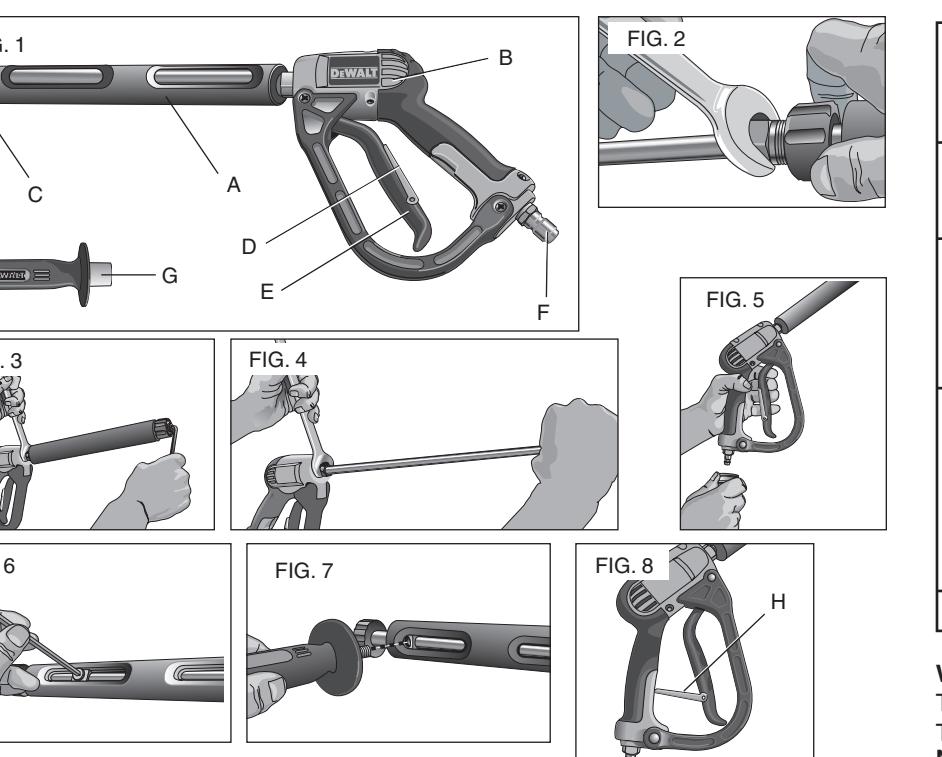

⚠ DANGER: RISK OF UNSAFE OPERATION

WHAT CAN HAPPEN

HOW TO PREVENT IT

- Unsafe operation of your pressure washer could lead to serious injury or death to you or others.
- Become familiar with the operation and controls of the pressure washer.
- Keep operating area clear of all persons, pets and obstacles.
- Do not operate the product when fatigued or under the influence of alcohol or drugs. Stay alert at all times.
- Never defeat the safety features of this product.
- Do not operate machine with missing, broken or unauthorized parts.
- Never leave wand unattended while unit is running.
- Keep children away from the pressure washer at all times.
- The spray gun/wand is a powerful cleaning tool that could look like a toy to a child.
- Reactive force of spray will cause gun/wand to kickback, and could cause the operator to slip or fall or misdirect the spray. Improper control of gun/wand can result in injuries to self and others.
- Do not overreach or stand on an unstable support.
- Do not use pressure washer while standing on a ladder.
- Grip gun/wand firmly with both hands. Expect the gun to kickback when triggered.



⚠ WARNING: RISK OF CHEMICAL BURN

WHAT CAN HAPPEN

HOW TO PREVENT IT

- Use of acids, toxic or corrosive chemicals, poisons, insecticides, or any kind of flammable solvent with this product could result in serious injury or death.
- Do not use acids, gasoline, kerosene, or any other flammable materials in this product. Use only household detergents, cleaners and degreasers recommended for use in pressure washers.
- Wear protective clothing to protect eyes and skin from contact with sprayed materials.



⚠ WARNING: RISK OF ELECTRICAL SHOCK

WHAT CAN HAPPEN

HOW TO PREVENT IT

- Spray directed at electrical outlets or switches, or objects connected to an electrical circuit, could result in a fatal electrical shock.
- Unplug any electrically operated product before attempting to clean it. Direct spray away from electric outlets and switches.

SAVE THESE INSTRUCTIONS

COMPONENTS (FIG. 1)

- Spray gun extension
- Spray gun
- 22 mm wand connection
- Trigger lock
- Trigger
- 3/8" male quick connect
- DP40 DeWALT Side Handle, not included

SPECIFICATIONS

Maximum Water Pressure	Maximum Water Temperature	Maximum Flow Rate
4000 PSI (275.8 bar)	140°F (284°C)	4.5 US GPM (17.0 l/min)

ASSEMBLY

Wand Assembly

DANGER: Risk of fluid injection and laceration. Attach a wand (or segments of wands) to the DeWALT Professional Spray Gun according to the specifications of the pressure washer and nozzle being used. See chart to select the correct wand length needed.



⚠ DANGER: RISK OF INJURY FROM SPRAY

HOW TO PREVENT IT

- High-velocity fluid spray can cause objects to break, propelling particles at high speed.
- Always wear ANSI-approved Z87.1 safety glasses. Wear protective clothing to protect against accidental spraying.
- Never point wand at or spray people or animals.
- Always secure trigger lock when wand is not in service to prevent accidental operation.
- Never permanently secure trigger in pull-back (open) position.
- Injuries can result if system pressure is not reduced before attempting maintenance or disassembly.
- To relieve system pressure, shut off engine, turn off water supply and pull gun trigger until water stops flowing.
- Light or unsecured objects can become hazardous projectiles.

PRESSURE WASHER TYPE	MINIMUM REQUIRED WAND LENGTH ** WITH SPRAY GUN EXTENSION ATTACHED	MINIMUM REQUIRED WAND LENGTH** WITH SPRAY GUN EXTENSION REMOVED
Type 1 Pressure Cleaning Machine	No minimum length requirement.	
Type 2 Pressure Cleaning Machine	16.5" (419.1 mm)	28" (711.2 mm)
Type 3 Pressure Cleaning Machine	34.5" (876.3 mm)	46.5" (1181.1 mm)

** Total length of wand with nozzle installed

WANDS WITH 22 MM MALE THREAD (FIG. 1 AND 2)

The spray gun extension (A) will accept wands with 22 mm male connectors. Thread the wand into the 22 mm wand connection (C) and tighten until secure and leak free.

NOTE: The spray gun extension (A) can be removed and the gun will accept wands with a 1/4" NPT male thread see Wand With 1/4" NPT Male Thread.

WANDS WITH 1/4" NPT MALE THREAD (FIG. 1, 3 AND 4)

1. While holding the fitting on the end of the gun outlet with a 3/4" wrench, remove the spray gun extension (A) from the gun using a 6 mm hex wrench as shown.

2. Apply sealant tape to threads of wand (at least 5 wraps) and thread wand into spray gun. While holding the fitting on the end of the gun outlet with a 3/4" wrench, tighten until secure and leak free. **NOTE:** Always reapply sealant tape when replacing wand.

Gun to Hose Assembly (Fig. 1 and 5)

Attach high pressure hose to spray gun (B) using 3/8" quick connect (F). Ensure connection is secure and leak free.

Attaching DP40 DeWALT Side Handle, optional

The DP40 DeWALT Side Handle (G, Fig. 1) is available for purchase from your local dealer or authorized service center to be used with the spray gun extension (A). The side handle gives the operator better control and handling of the spray gun.

TO ATTACH SIDE HANDLE

1. Remove the set screw from spray gun extension (A, Fig. 6) using a 3/16" hex wrench.

2. Thread the side handle (G, Fig. 7) into spray gun extension and tighten to desired position.

OPERATION

WARNING: Stand on a stable surface and grip gun/wand firmly with both hands. Expect the gun to kick when triggered.

⚠ DANGER: Risk of injury from spray. Engage the trigger lock (H, Fig. 8) when gun is not in use to prevent accidental spraying.

CAUTION: DO NOT USE HOT WATER, USE COLD WATER ONLY.

CAUTION: The high-pressure spray from your pressure washer is capable of causing damage to surfaces such as wood, glass, automobile paint, auto striping and trim, delicate objects such as flowers and shrubs. Before spraying, check the item to be cleaned to assure yourself that it is strong enough to resist damage from the force of spray.

NOTE: Before each use inspect the product for damage, pay close attention to the spray gun, hose and couplers. Replace any damaged part before use.

1. Start the pressure washer as outlined in the instruction manual supplied with the unit.

2. Depress the trigger on the gun to begin spraying. Release trigger to stop spraying.

STORAGE

1. Disconnect the high pressure hose and with the nozzle pointed down and the spray gun in a vertical position. Squeeze the trigger to drain all water from the spray gun, spray gun extension and wand(s).

2. Store inside in the gun holder of the pressure washer or other suitable location.

ACCESSORIES


Recommended accessories for use with your tool are available for purchase from your local dealer or authorized service center. If you need assistance in locating any accessory for your tool, please contact DeWALT Industrial Tool Co., 701 East Joppa Road, Baltimore, MD 21286, call 1-800-4-DEWALT (1-800-433-9258) or visit our website www.dewalt.com.

CAUTION: The use of any other accessory not recommended for use with this tool could be hazardous. Use only accessories rated equal to or higher than the rating of the pressure washer.

REPAIRS

To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustment should be performed by a DeWALT factory service center, a DeWALT authorized service center or other qualified service personnel. Always use identical replacement parts.

FREE WARNING LABEL REPLACEMENT: If your warning labels (next page) become illegible or are missing, call 1-800-4-DEWALT for a free replacement.

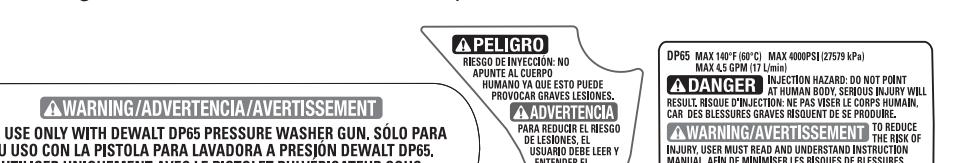

DP65 MAX 10°F (40°C), MAX 4000PSI (275.8 bar)
MAX 4.5 GPM (17 l/min)

PELIGRO RIESGO DE INJERCIÓN DE LIQUIDO NO APUNTAR AL CUERPO. HUMANO YA QUE ESTO PUEDE PROVOCAR LESIONES SERIAS O FATALES.

DANGER RISQUE D'INJECTION DE LIQUIDE NE PAS POINTER SUR LE CORPS HUMAIN. CELA PEUT CAUSER DES BLESSURES GRAVES OU MORTELLES.

ADVERTENCIA RIESGO DE INJERCIÓN DE LIQUIDO NO APUNTAR AL CUERPO. HUMANO YA QUE ESTO PUEDE PROVOCAR LESIONES GRAVES O MORTALES.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY ACCESORIES RATED EQUAL TO OR HIGHER THAN THE RATING OF THE PRESSURE WASHER.

INJURY, USER MUST READ AND UNDERSTAND INSTRUCTION MANUAL. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY. USE ONLY

