

# CRAFTSMAN


## CMHT77634

Laser Level · Nivel Láser · Niveau Laser



N599502

www.CRAFTSMAN.com

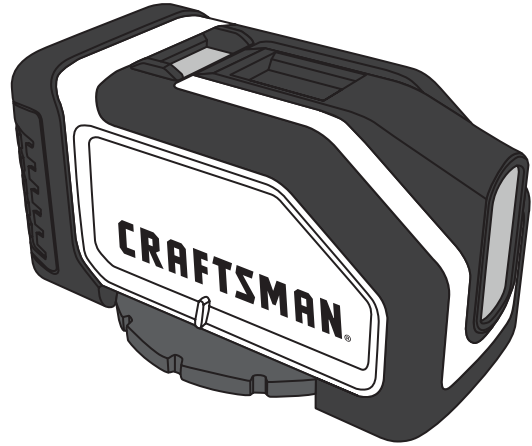

### ENGLISH

SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE.

**WARNING:** Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS

#### SAFETY INSTRUCTIONS

- DANGER:** Laser Radiation, avoid direct eye exposure, serious eye injury can result.
- Do not use optical tools such as a telescope or transit to view the laser beam.
- Do not place the laser in a position which may cause anyone to intentionally or unintentionally stare into the laser beam. Serious eye injury could result
- Do not operate the laser around children or allow children to operate the laser.
- WARNING: DO NOT DISASSEMBLE THE LASER.** There are no user serviceable parts inside. Disassembling the Laser will void all warranties on the product. Do not modify the product in any way. Modifying the tool may result in Hazardous Laser Radiation Exposure.

**WARNING:** Use of controls or adjustments or performance of procedures other than those specified in this manual may result in hazardous laser radiation exposure.


- Do not operate in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Use only with the specifically designated batteries. Use of any other batteries may create a risk of fire.
- Store idle product out of reach of children and other untrained persons. Lasers are dangerous in the hands of untrained users.
- Use only accessories that are recommended by the manufacturer for your model. Accessories that may be suitable for one laser, may create a risk of injury when used on another laser.
- Repairs and servicing MUST be performed by a qualified repair facility. Repairs performed by unqualified personnel could result in serious injury.
- Do not remove or deface warning labels. Removing labels increases the risk of exposure to radiation.
- Turn the laser off when it is not in use. Leaving the laser on increases the risk of staring into the laser beam.
- Position the laser securely. Damage to the laser or injury could result if the laser falls.
- For indoor use only.
- This product is intended for use in a temperature range of 50° F (10° C) - 104° F (40° C)."
- CAUTION:** Use caution when drilling, nailing or cutting into walls, floors and ceilings which may contain electrical wiring or pipes. **Always turn off the power when working near electrical wires.**

- Avoid exposure-Laser radiation emitted from this aperture.






# CRAFTSMAN

NOTE: For your convenience and safety, the following labels are on your laser: • Para su comodidad y seguridad, el láser incluye las siguientes etiquetas: • Pour plus de commodité et de sécurité, les étiquettes suivantes sont apposées sur votre laser:

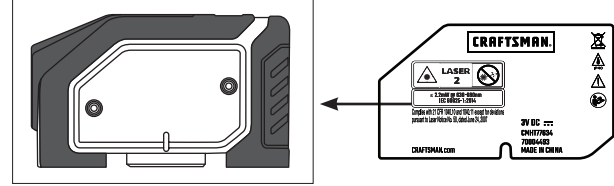

FEATURES	
A.) Drywall Pin	
B.) Protractor Ring	
C.) Laser On/Off Switch	
D.) Battery Compartment Cover	
E.) Magnetic Base	
F.) Vertical Bubble Vial	
G.) Horizontal Bubble Vial	
H.) Laser Line	
I.) Alignment Indicator	

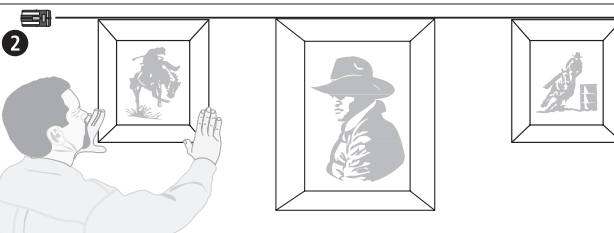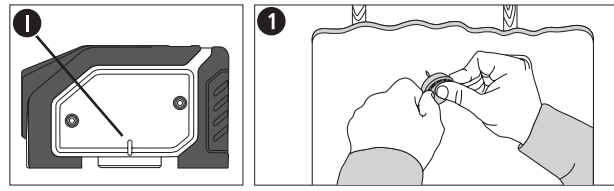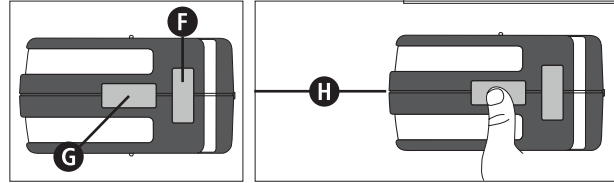

The label on your tool may include the following symbols:

- V.....volts
- mW .....milliwatts
- nm .....wavelength in nanometers
- Class2 .....Class 2 Laser

#### INSTALLING THE BATTERIES

Ensure laser on/off switch (C) is in the full off position by moving switch actuator to "Off" position. Remove the battery compartment cover (D). Insert 2 fresh 1.5 volt AA alkaline or heavy duty batteries making sure to match (+) and (-) terminals correctly. Replace battery compartment cover.

**WARNING: Batteries can explode, or leak, and can cause injury or fire.**

To reduce this risk:

- Carefully follow all instructions and warnings on the battery label and package.
- Always insert battery correctly with regard to polarity (+ and -), marked on the battery and the equipment.
- Do not short battery terminals.
- Do not charge battery.
- Remove dead battery immediately and dispose of per local codes.
- Do not dispose of battery in fire.
- Keep batteries out of reach of children.
- Remove battery if the device will not be used for several months.

Transporting batteries can possibly cause fires if the battery terminals inadvertently come in contact with conductive materials such as keys, coins, hand tools and the like. The US Department of Transportation Hazardous Material Regulations (HMR) actually prohibit transporting batteries in commerce or on airplanes (i.e. packed in suitcases and carryon luggage) UNLESS they are properly protected from short circuits. So when transporting individual batteries, make sure that the battery terminals are protected and well insulated from materials that could contact them and cause a short circuit.

#### OPERATING INSTRUCTIONS

##### Drywall Pin

**CAUTION:** Pin is sharp and should be handled with care.

- NOTE:** The drywall pin (A) can only be used for drywall, NOT other surfaces including plaster.
- To press pin into drywall, first expose pin by rotating pin base from opposite side.
- While maintaining pressure on pin base, insert pin straight and seat firmly against drywall surface as shown in Figure 1. The drywall pin should always be pushed in by hand and never driven by a hammer.
- To remove drywall pin from the wall, pull out straight.

**CAUTION:** Always be sure drywall pin is closed when not in use.

##### HORIZONTAL OR VERTICAL LINE PROJECTION ON A WALL

1.) Hands free operation of the laser:

- Attach drywall pin to the wall per instructions under "Drywall Pin" section. Always make sure drywall pin is securely attached to the wall.
  - Attach the magnetic base (E) of the laser to drywall pin.
  - Move on/ off switch (C) actuator to the "On" position to project the laser line.
  - Rotate the laser to center horizontal (G) or vertical (F) bubble vials. Be sure the laser is firmly attached to the drywall pin before removing support.
- 2.) Operation of the laser:
- Hold the laser firmly against the wall.
  - Move on/ off switch (C) actuator to the "On" position to project the laser lines.
  - Align laser line with appropriate mark on your work surface, rotate the laser to center horizontal (G) or vertical (F) bubble vials. Realign laser with mark if necessary.
  - Figure 2 illustrates a typical application for the Laser Level when it is wall mounted.

##### ANGULAR LINE PROJECTION ON A WALL

Operation of the laser:

- Attach drywall pin to the wall per instructions under "Drywall Pin" section. Always make sure drywall pin is securely attached to the wall.
- Attach the magnetic base (E) of the laser to drywall pin.
- Rotate the laser to center horizontal (G) or vertical (F) bubble vials.
- Turn protractor ring to align "0" mark with Alignment Indicator (I).
- Rotate laser until indicator (I) is at desired angle.
- Move on/ off switch (C) actuator to the "On" position to project the laser line.

##### STRAIGHT LINE PROJECTION ON ANY FLAT SURFACE

Free hand operation of the laser:

- Hold the laser firmly against a flat surface.
- Move on/off switch (C) actuator to the "On" position to project the laser line.
- Align laser line with appropriate marks on your work surface (common use is laying tiles or marking plywood for cutting purpose).

**DANGER:** Laser Radiation, avoid direct eye exposure.

##### HELPFUL HINTS

- If the laser light becomes dim or is no longer visible when the switch is in the on position check or change the battery.
- The laser lines are only level on the wall against which the unit is held or hung. The short line visible on any adjacent wall is not level. The same is true for straight line projection on a floor or wall, the short line on any adjacent wall is not level.
- The laser unit should never be used as a spirit (bubble) level. The levels are only calibrated to the laser line when held or hung against a vertical surface.
- The laser unit only generates level lines when held or hung against a vertical surface.
- Make sure laser is as square as possible to flat surface to ensure proper line projection.

##### STORAGE

Always store the laser level indoors.

##### MAINTENANCE

Use only mild soap and damp cloth to clean the tool. Never let any liquid get inside the tool; never immerse any part of the tool into a liquid.

**IMPORTANT:** To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustment (other than those listed in this manual) should be performed by authorized service centers or other qualified service organizations, always using identical replacement parts.

##### Accessories

**WARNING:** The use of any accessory not recommended for use with this tool could be hazardous.

##### LIMITED WARRANTY

Duration of coverage may vary; check product instructions for precise length of coverage.

##### WARRANTY SERVICE

To obtain the warranty coverage stated below, return a defective product with proof of sale to the retailer from which it was purchased.

##### CRAFTSMAN LIMITED WARRANTY

FOR ONE YEAR from the date of sale, this product is warranted against defects in material or workmanship.

WITH PROOF OF SALE, a defective product will be replaced free of charge.

This warranty does not cover expendable parts that can wear out from normal use within the warranty period.

This warranty applies for only 90 days from the date of sale if this product is ever used while providing commercial services or if rented to another person.

#### TECHNICAL SPECIFICATIONS OF LASER LEVEL:

Laser diode wavelength:	630 - 680 nm (red color)
Laser Class:	Class 2
Working range:	Up to 15 feet (depends on light conditions)
Leveling accuracy:	
Projecting right	±1/8 inch (3 mm) @ 10 feet (3 m)
Projecting up	±1/8 inch (3 mm) @ 10 feet (3 m)
Projecting left	±1/4 inch (6 mm) @ 10 feet (3 m)
Batteries:	2 AA (included)
Voltage:	3 Volts
Operating temperature:	50°F (10°C)- 104° F (40°C)
Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007	

### SPANISH

#### CONSERVE ESTE MANUAL PARA FUTURAS CONSULTAS.

**ADVERTENCIA:** Lea y comprenda todas las instrucciones. El incumplimiento de todas y cada una de las instrucciones enumeradas debajo puede provocar descarga eléctrica, incendio o daños personales serios.

CONSERVE ESTAS INSTRUCCIONES

#### INSTRUCCIONES DE SEGURIDAD

**PELIGRO:** Radiación láser, evite la exposición directa de los ojos, pueden producirse lesiones oculares graves.

- No utilice herramientas ópticas, como por ejemplo un telescopio o un teodolito para ver el rayo láser.
  - No ubique el láser en una posición que pueda provocar que alguien intencional o no intencionalmente fije su vista en el rayo láser. Podría provocar lesiones oculares graves
  - No opere el láser con niños alrededor ni permita que los niños operen el láser.
  - ADVERTENCIA: NO DESARME EL LÁSER.** No contiene elementos a los que el usuario pueda hacerles mantenimiento. Desarmar el Láser anulará todas las garantías del producto. No modifique el producto de ninguna manera. La modificación de la herramienta podría provocar exposición a radiación láser peligrosa.
  - ADVERTENCIA:** El uso de controles o ajustes o la realización de procedimientos diferentes a aquéllos especificados en este manual puede provocar exposición a radiación láser peligrosa.
  - No opere la herramienta en atmósferas explosivas, como ambientes donde se encuentran líquidos, gases o polvo inflamables.
  - Utilice únicamente con las baterías recomendadas específicamente. El uso de cualquier otra fuente de energía puede producir riesgo de incendio.
  - Guarde el producto que no está en uso fuera del alcance de los niños y de personas no entrenadas. El láser es peligroso en las manos de usuarios no entrenados.
  - Utilice sólo accesorios recomendados por el fabricante para el modelo que posee. Los accesorios correctos para un láser pueden provocar riesgo de lesiones si se utilizan con otro láser.
  - Las reparaciones y el mantenimiento DEBEN ser realizados por un centro de reparaciones calificado. Las reparaciones realizadas por personal no calificado pueden provocar lesiones graves.
  - No retire ni borre las etiquetas de advertencia. El retiro de las etiquetas aumenta el riesgo de exposición a radiación.
  - Apague el láser cuando no esté en uso. Dejar encendido el láser aumenta el riesgo de fijar la vista en el rayo láser.
  - Coloque el láser de forma segura. Si el láser se cae, puede dañarse o provocar lesiones.
  - Únicamente para uso en interiores.
  - Este producto está diseñado para utilizarse con temperaturas entre 10°C (50°F) y 40° (104°F).
- PRECAUCIÓN:** Tenga precaución al taladrar, clavar o cortar paredes, pisos y techos que puedan contener cableado eléctrico o tuberías. **Siempre desconecte la energía al trabajar cerca de cableado eléctrico.**

La etiqueta de su herramienta puede incluir los siguientes símbolos:

- V.....voltios
- mW .....milivatios
- nm .....longitud de ondas en nanómetros
- Clase2 .....Láser de Clase 2



- Evite la exposición - Por este orificio se emite la radiación láser.

#### CARACTERÍSTICAS

A.)Clavija para madera contrachapada	E.)Base magnética
B.)Anillo transportador	F.) Nivel de burbuja vertical
C.)Interruptor de encendido/apagado del láser	G.)Nivel de burbuja horizontal
D.)Tapa del compartimento de las baterías	H.)Línea de láser
	I.) Indicador de alineación

#### INSTALACIÓN DE LAS BATERÍAS

Asegúrese de que el interruptor de encendido/apagado del láser (C) esté en la posición de apagado girando el actuador del interruptor a la posición "Off". Retire la tapa del compartimiento de las baterías (D). Inserte 2 baterías alcalinas AA de 1,5 voltios o baterías para trabajos pesados nuevas y asegúrese de que los terminales (+) y (-) coincidan correctamente. Vuelva a colocar la tapa del compartimiento de las baterías.

**ADVERTENCIA: Las baterías pueden explotar o perder, y pueden provocar lesiones o incendios.**

Para disminuir este riesgo:

- Siga cuidadosamente todas las instrucciones y las advertencias de la etiqueta y el envase de la batería.

