


# Micro Processor Controlled Portable Band Saw

## Instruction manual

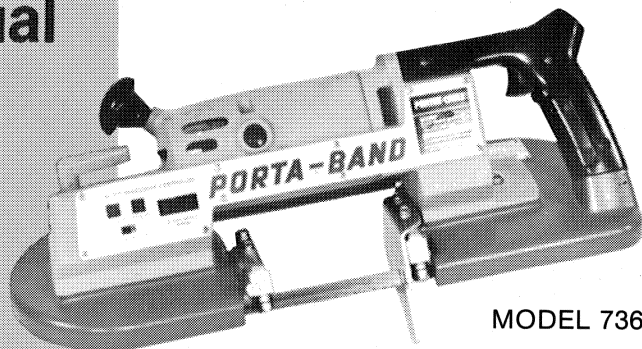

MODEL 736

### IMPORTANT

Please make certain that the person who is to use this equipment carefully reads and understands these instructions before starting operations.

The Model and Serial No. plate is located on the main housing of the tool. Record these numbers in the spaces below and retain for future reference.

Model No. \_\_\_\_\_

Type \_\_\_\_\_

Serial No. \_\_\_\_\_

**PORTER-CABLE**  
PROFESSIONAL POWER TOOLS

Part No. 693316-2910

# SAFETY INSTRUCTIONS

## GROUNDING INSTRUCTIONS

This tool should be grounded while in use to protect the operator from electric shock. The tool is equipped with an approved three-conductor cord and three-prong grounding type plug to fit the proper grounding type receptacle. The green (or green and yellow) conductor in the cord is the grounding wire. Never connect the green (or green and yellow) wire to a live terminal.

If your unit is for use on less than 150 Volts, the power cord is equipped with a plug that has two flat, parallel current-carrying prongs and one longer, round or "U"-shaped, ground prong which requires a mating 3-conductor grounded type receptacle, as shown in Fig. 1.

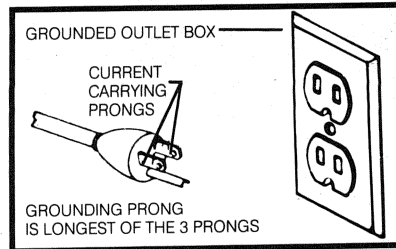


Fig. 1

An adapter, shown in Fig. 2, is available for connecting 3-prong grounding type plugs that are used on units less than 150 Volts to 2-prong receptacles. THIS ADAPTER IS NOT ALLOWED IN CANADA. The green colored rigid ear, lug, etc., must be connected to a permanent ground such as a properly grounded outlet box, as shown in Fig. 2.

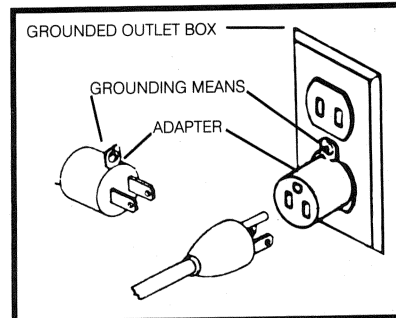


Fig. 2

If your unit is for use on 150 to 250 Volts, the power cord is equipped with a plug that has two flat current-carrying prongs in tandem, and one round or "U" - shaped, longer ground prong, as shown in Fig. 3. This plug is used only with the proper mating 3-conductor grounding type receptacle, as shown in Fig. 3. No adapter is available for this type plug.

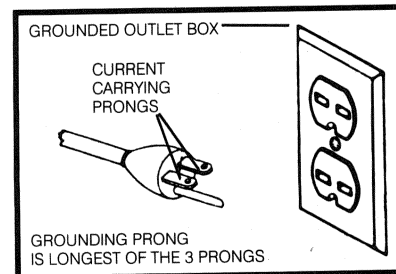


Fig. 3

**IN ALL CASES, MAKE SURE THE RECEPTACLE IN QUESTION IS PROPERLY GROUNDED.**

**NEVER REMOVE GROUNDING PRONG FROM POWER PLUG.**

## EXTENSION CORDS

Use only three-wire extension cords which have three prong grounding-type plugs and three-pole receptacle which accept the tool's plug. Replace or repair damaged or worn cord immediately. **DO NOT ATTEMPT TO REPAIR POWER CORD.**

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** When using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

READ AND FOLLOW ALL INSTRUCTIONS.

There are certain applications for which this tool was designed. Porter-Cable strongly recommends that this tool NOT be modified and/or used for any application other than for which it was designed. If you have any questions relative to its application DO NOT use the tool until you have written Porter-Cable and we have advised you.

Manager of Product Engineering  
Porter-Cable Corporation  
4825 Highway 45 North  
P.O. Box 2468  
Jackson, TN 38302-2468

**1. KEEP WORK AREA CLEAN.** Cluttered areas and benches invite injuries.

**2. AVOID DANGEROUS ENVIRONMENT.** Don't expose power tools to rain. Don't use power tools in damp or wet locations. Keep area well lit. Avoid chemical or corrosive environment. Do not use tool in presence of flammable liquids or gases.



THIS SYMBOL DENOTES DO NOT EXPOSE TO RAIN OR USE IN DAMP LOCATIONS

CE SIGNE EST L'INDICATION DE NE PAS EXPOSER A LA PLUIE ET NE PAS UTILISER DANS LES EMPLACEMENTS HUMIDES

**3. GUARD AGAINST ELECTRIC SHOCK.** Prevent body contact with grounded surfaces. For example: pipes, radiators, ranges, refrigerator enclosures.

**4. KEEP CHILDREN AWAY.** Do not let visitors contact tool or extension cord. All visitors should be kept away from work area.

**5. STORE IDLE TOOLS.** When not in use, tools should be stored in dry, and high or locked-up place — out of the reach of children.

**6. DON'T FORCE TOOL.** It will do the job better and safer at the rate for which it was intended.

**7. USE RIGHT TOOL.** Don't force small tool or attachment to do the job of a heavy duty tool. Don't use tool for purpose not intended—for example—do not use a circular saw for cutting tree limbs or logs.

**8. DRESS PROPERLY.** Do not wear loose clothing or jewelry. Loose clothing, draw strings and jewelry can be caught in moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.

**9. USE SAFETY GLASSES.** Wear safety glasses or goggles while operating power tools. Also face or dust mask if operation creates dust. All persons in the area where power tools are being operated should also wear safety glasses and face or dust mask.

**10. DON'T ABUSE CORD.** Never carry tool by cord or yank it to disconnect from receptacle. Keep cord from heat, oil, and sharp edges.

Have damaged or worn power cord and strain reliever replaced immediately. DO NOT ATTEMPT TO REPAIR POWER CORD.

**11. SECURE WORK.** Use clamps or a vise to hold work. It's safer than using your hand and it frees both hands to operate tool.

**12. DON'T OVERREACH.** Keep proper footing and balance at all times.

**13. MAINTAIN TOOLS WITH CARE.** Keep tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories. Inspect tool cords periodically and if damaged, have repaired by authorized service facility. Inspect extension cords periodically and replace if damaged. Have all worn, broken or lost parts replaced immediately. Keep handles dry, clean and free from oil and grease.

**14. DISCONNECT TOOLS.** When not in use, before servicing, and when changing accessories such as blades, bits, cutters, etc.

**15. REMOVE ADJUSTING KEYS AND WRENCHES.** Form habit of checking to see that keys and adjusting wrenches are removed from the tool before turning it on.

**16. AVOID UNINTENTIONAL STARTING.** Do not carry a plugged-in tool with finger on switch. Be sure switch is off when plugging in. Keep hands, body and clothing clear of blades, bits, cutters, etc. when plugging in the tool.

**17. OUTDOOR USE EXTENSION CORDS.** When tool is used outdoors, use only extension cords marked "Suitable for use with outdoor appliances - store indoors when not in use."

**18. STAY ALERT.** Watch what you are doing. Use common sense. Do not operate tool when you are tired or while under the influence of medication, alcohol or drugs.

**19. CHECK DAMAGED PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by authorized service center. Do not use tool if switch does not turn it on and off.

**20. WEAR EAR PROTECTION** to safeguard against possible hearing loss.

SAVE THESE INSTRUCTIONS

#### **ADDITIONAL SAFETY RULES FOR PORTABLE BAND SAWS**

1. Keep hands away from cutting area.
2. Keep blades sharp.
3. Keep blade guard in place.
4. Make sure the material to be cut is firmly held to prevent movement.

5. Stay clear of end pieces that may fall after being cut off.
6. Never use a liquid coolant with portable band saws.
7. **WARNING:** EXERCISE EXTREME CAUTION WHEN CUTTING BLIND INTO CONDUIT AND PIPE. BE CERTAIN THE OBJECT BEING CUT DOES NOT CONTAIN ELECTRICAL WIRES, GASES, WATER, CHEMICALS, ETC. WHICH COULD CREATE HAZARDOUS CONDITIONS CAUSING PERSONAL INJURY AND PROPERTY DAMAGE.

**REPLACEMENT PARTS**

When servicing use only identical replacement parts.

**MOTOR**

Model 736 will operate on single phase, 60 cycle, A.C. current and voltage within plus or minus 5 percent of that shown on the specification plate on the tool. Refer to the specification plate on your tool for proper voltage and current rating.

**CAUTION:** Do not operate your tool on a current on which the voltage is not within correct limits. Do not operate tools rated A.C. only on D.C. current. To do so may seriously damage the tool.

**EXTENSION CORD SELECTION**

If an extension cord is used, make sure the conductor size is large enough to prevent excessive voltage drop which will cause loss of power and possible motor damage. A table of recommended extension cord sizes will be found below. This table is based on limiting line voltage drop to 5 volts (10 volts for 230 volts) at 150% of rated amperes.

If an extension cord is to be used outdoors it must be marked with the suffix W-A following the cord type designation. For example — SJTW-A to indicate it is acceptable for outdoor use.

RECOMMENDED EXTENSION CORD SIZES FOR USE WITH PORTABLE ELECTRIC TOOLS

		Length of Cord in Feet									
		115V	25 Ft.	50 Ft.	100 Ft.	150 Ft.	200 Ft.	250 Ft.	300 Ft.	400 Ft.	500 Ft.
		230V	50 Ft.	100 Ft.	200 Ft.	300 Ft.	400 Ft.	500 Ft.	600 Ft.	800 Ft.	1000 Ft.
Nameplate Ampere Rating	0-2	18	18	18	16	16	14	14	12	10	10
	2-3	18	18	16	14	14	12	12	10	10	10
	3-4	18	18	16	14	12	12	10	10	8	8
	4-5	18	18	14	12	12	10	10	8	8	8
	5-6	18	16	14	12	10	10	8	8	6	6
	6-8	18	16	12	10	10	8	6	6	6	6
	8-10	18	14	12	10	8	8	6	6	4	4
	10-12	16	14	10	8	8	6	6	4	4	4
	12-14	16	12	10	8	6	6	6	4	2	2
	14-16	16	12	10	8	6	6	4	4	2	2
	16-18	14	12	8	8	6	4	4	2	2	2
18-20	14	12	8	6	6	4	4	2	2	2	

# OPERATING INSTRUCTIONS

## FOREWORD

Model 736 PORTER-CABLE Band Saw is designed to cut various types of material up to 3-3/8" diameter or 3-3/8" × 4-1/8" rectangular shape.

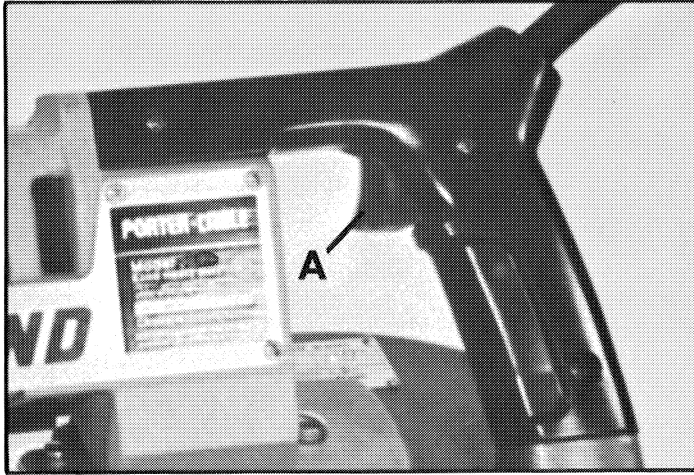


Fig. 1

## TO START AND STOP SAW

1. Make sure power circuit voltage is the same as that shown on the specification plate on the saw. Connect machine to power circuit.
2. Squeeze Trigger Switch (A) Fig. 1 to start motor. Release trigger to stop motor.

## MICRO PROCESSOR SPEED CONTROL

The Micro Processor Control is located as shown in Fig. 2. A number of operating speeds in 10 SFPM (surface feet per minute) increments are available by pressing the buttons marked "Slower" (A) Fig. 2, or "Faster" (B) Fig. 2.

When the power plug is connected to the power source, "160" appears in the read-out display marked "Blade Speed SFPM" (C) Fig. 2. Each press of a button increases or decreases the speed by 10 SFPM through a range from 80 to 240 SFPM. The desired speed may be set prior to turning the saw "On", after connecting power plug to power source, or any time while the saw is running.

When the trigger switch (A) Fig. 1 is squeezed, the saw will operate at the speed indicated by the readout display. When the trigger switch is released and the motor has stopped, the next time the trigger switch is squeezed the saw will start at the same speed at which it had been running as long as the power plug has not been disconnected from the power source.

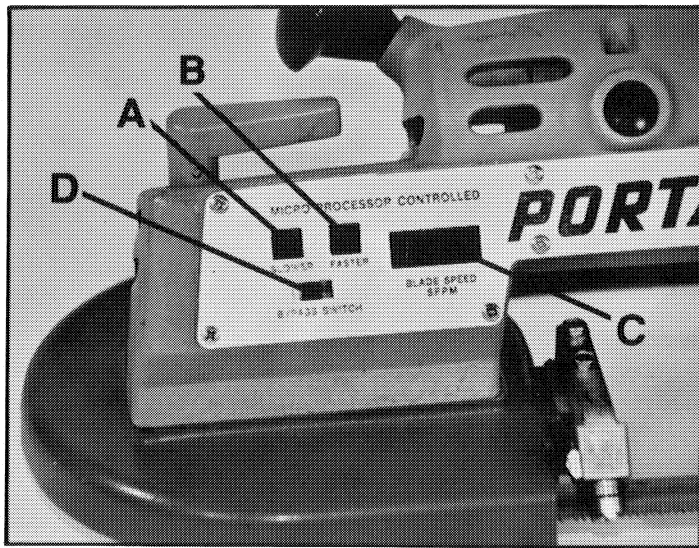


Fig. 2

When the power plug has been disconnected from the power source and then reconnected, "160" will reappear in the readout display and the desired operating speed will have to be re-selected.

A bypass switch (D) Fig. 2 is provided to bypass the Micro Processor control. When this switch is towards the handle of the saw "0" will appear in the readout display. When the trigger switch is squeezed, "240" will appear in the display. As the saw cuts and a load is applied against the blade, the readout will display the speed of the blade as it slows below 240 SFPM.

The following chart contains suggested speeds for cutting various materials. Experience will indicate the most satisfactory speed to use for any particular material.

SUGGESTED CUTTING SPEEDS																					
T P I	Aluminum-Brass Magnesium-Copper Bronze-Mild Steel					Angle Iron Cast Iron Galvanized Pipe				Chrome and Tungsten Steels Problem Materials				Stainless Steel				Electrical Insulated Cable-Fiber Glass Asbestos-Plastics			
	3/32 to 1/8	1/8 to 1/4	1/4 to 1/2	1/2 to 3/4	3/4 and Over	3/32 to 1/8	1/8 to 1/4	1/4 to 1/2	1/2 and Over	3/32 to 1/8	1/8 to 1/4	1/4 to 1/2	1/2 and Over	3/32 to 1/8	1/8 to 1/4	1/4 to 1/2	1/2 and Over	3/32 to 1/8	1/8 to 1/4	1/4 to 1/2	1/2 and Over
6					200																
8					200																
10				210					120				80				80				100
14			220					140				100				90					120
18		230					160				120				100				140		
24	240					180				140				110				160			

# SELECTING THE BLADE

## BAND SAW BLADES

PORTER-CABLE Model 736 Band Saw requires blades that are .020 thick, 1/2" wide, and 44 7/8" long.

**CAUTION:** Blades for stationary band saws are of different thickness than above and WILL NOT fit the precision blade guides on portable band saws. Therefore, they MUST NOT be used.

REFER TO THE BLADE SELECTION CHART for types of blades available and their recommended usages. This chart is provided as a guide only. Due to the many materials that can be cut, operator's experience will determine which blade will have the longest life for any specific operation.

## WHICH BLADE TO USE

In general, select a blade which will allow at least two teeth to be engaged in the material thickness. The thinner or the harder the material, the finer the blade teeth. The thicker or the softer the material, the coarser the blade teeth. The hi-speed steel blades stay sharp longer than carbon steel blades.

## USE OF LUBRICANTS

NEVER USE LIQUID COOLANT WITH YOUR BAND SAW. Damage to the blade guide bearings or rubber tires on the pulleys may result. Porter-Cable-s #44914 "Lube Wax" is provided with your saw and recommended when cutting aluminum, brass and thick materials. Cast iron should be cut dry.

With the saw running, apply the wax momentarily to both sides of the blade. Reapply wax intermittently as needed.

**WARNING:** Exercise extreme care to prevent hands from contacting the blade.

After prolonged cutting, the wax will cling to the pulleys of your BAND SAW. This does not affect the operation of the machine. All that is necessary is to disconnect the machine from the power source and wipe the wax from the pulleys.

## TO CHANGE SAW BLADES

**CAUTION:** DISCONNECT saw from power source.

TO REMOVE BLADE - Turn handle (A) Fig. 4, clockwise to release tension on the saw blade. Remove the blade, first from the pulleys and then from the blade guide.

Before installing a blade, clean chips and wax, which may have accumulated on blade guides and pulley tires. TO INSTALL BLADE - Insert blade in blade guides and then position on pulleys. MAKE SURE TEETH ON LEFT SIDE OF MACHINE POINT TOWARD THE REAR OF THE MACHINE. See Fig. 3.

Turn handle (A) Fig. 4 counterclockwise as far as it will go. This reinstates tension on saw blade.

Start and stop saw two or three times to seat blade on pulleys.






Fig. 3

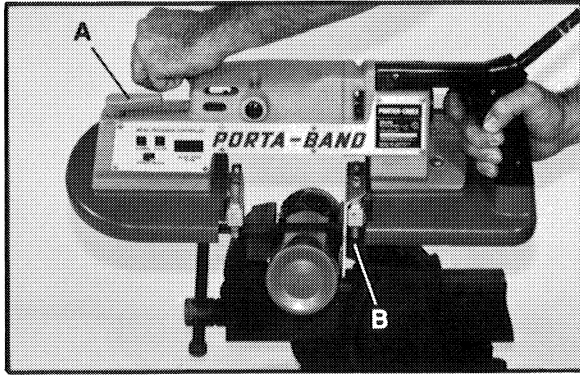


Fig. 4

### HOW TO USE A PORTABLE BAND SAW

1. Verify material to be cut is firmly held to prevent movement.
2. Set Micro Processor Control to desired speed. Speed CAN be changed while machine is running.
3. Hold the saw as shown in Fig. 4 with the work stop (B) contacting the work and blade teeth clear of the work.
4. Turn saw "ON" and lower onto work. Allow weight of saw to control cutting pressure.
5. Hold saw straight in the cut. Any twisting or cocking of the blade results in shorter blade life.
6. **CAUTION:** Stay clear of end pieces that may fall after being cut off.
7. At completion of cut DO NOT allow saw to fall against work HOLD SAW SECURELY.
8. Fig. 5, shows the proper cutting position for various shapes.

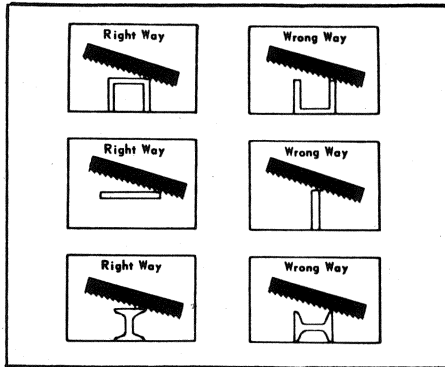


Fig. 5

## MAINTENANCE

### KEEP TOOL CLEAN

Periodically blow out all air passages with dry compressed air. Remove wax and chip buildup from pulley tires and blade guides. All plastic parts should be cleaned with soft cloths. NEVER use solvents to clean plastic parts.

**CAUTION:** Wear safety glasses when using compressed air.

### FAILURE TO START

Should your tool fail to start, check to make sure the prongs on the cord plug are making good contact in the outlet. Also, check for blown fuses or open circuit breakers in the line.

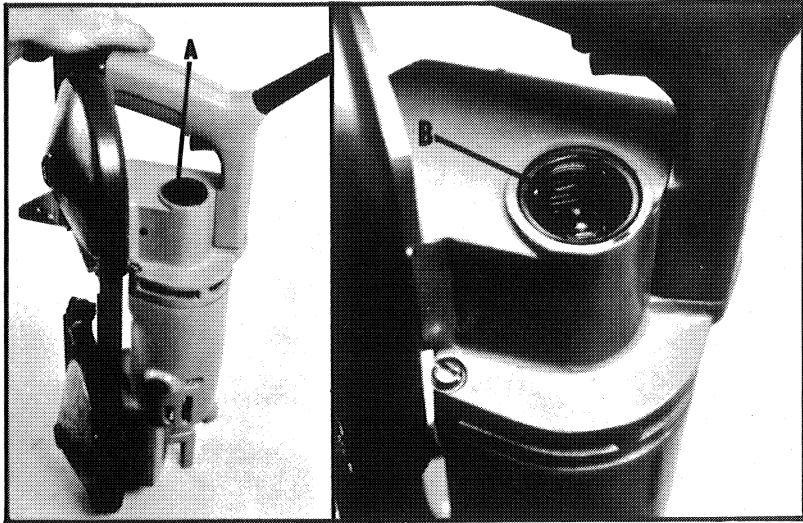


Fig. 6

### LUBRICATION

Although all PORTER-CABLE tools have been thoroughly lubricated with a sufficient amount of high grade lubricant at the time of manufacture, it is recommended that the oil level in the gear chamber be checked before using your saw and periodically thereafter as follows:

1. **CAUTION:** Remove band saw blade to prevent accidentally contacting it while checking oil.
2. Remove oil filler plug and gasket (A) Fig. 6.
3. Stand saw on front pulley housing and start motor.
4. With motor running, observe whether the lubricant is being carried over the top of the worm gear teeth (B) Fig. 6. If not, stop the motor and add a small amount of lubricant furnished with your saw.
5. Repeat step 4 until the lubricant is carried over the top of the worm gear teeth while the motor is running. **DO NOT OVER FILL GEAR CHAMBER.** If you do, the pressure created by the pumping

action of the gears will force lubricant thru the seals into the motor chamber and may cause damage to the motor as well as gear failure.

6. Install oil plug and gasket.

### **BRUSH INSPECTION AND LUBRICATION**

At approximately 100 hours of use, take or send your tool to your nearest Authorized Porter-Cable Service Station to be thoroughly cleaned and inspected; worn parts replaced, when necessary; relubricated with fresh lubricant, if required; reassembled with new brushes; and performance tested.

Any loss of power before the above maintenance check may indicate the need for immediate servicing of your tool. **DO NOT CONTINUE TO OPERATE TOOL UNDER THIS CONDITION.** If proper operating voltage is present, return your tool to the Service Station for immediate service.

### **SERVICE AND REPAIRS**

All quality tools will eventually require servicing or replacement of parts due to wear from normal use. These operations, including brush inspection and replacement, should **ONLY** be performed by either an **AUTHORIZED PORTER-CABLE SERVICE STATION** or a **PORTER-CABLE SERVICE CENTER**. All repairs made by these agencies are fully guaranteed against defective material and workmanship. We can not guarantee repairs made or attempted by anyone other than these agencies.

Should you have any questions about your tool, feel free to write us at any time. In any communications, please give all information shown on the nameplate of your tool (model number, type, serial number, etc.).

## **ACCESSORIES**

The testing of this tool has been accomplished with the following accessories. For safest operation, it is recommended that only these accessories be used with this product.

**WARNING** - Since accessories other than those listed have not been tested with this product, use of such accessories could be hazardous.

53651 CARRYING CASE

48105 GEAR LUBRICANT ALL MODELS

44914 LUBE WAX

SEE BLADE SELECTION CHART FOR AVAILABLE BLADES.

## Bi-Metal Blades

### BI-METAL BAND SAW BLADES

Bi-Metal Blades are manufactured by Electron Beam welding special high speed steel teeth to a strong, flexible alloy steel backing, producing a double-tough blade that cuts faster and outlasts ordinary steel blades by as much as three times. Because bi-metal blades last much longer, they require fewer blade changes!



BAND SAW SPEED				USE SINGLE SPEED BAND SAW OR HIGHER SPEEDS ON 2-SPEED AND VARIABLE SPEED BAND SAW				USE LOWER SPEEDS ON 2-SPEED OR VARIABLE SPEED BAND SAWS					
MATERIAL TO BE CUT				ALUMINUM-BRASS-MAGNESIUM-COPPER-BRONZE-MILD STEEL		ANGLE IRON-CAST IRON-GALVANIZED PIPE		CHROME AND TUNGSTEN STEELS-PROBLEM MATERIALS		STAINLESS STEEL		ELECTRICAL INSULATED CABLE-FIBER GLASS-ASBESTOS-PLASTICS	
Blade Pkg. No.	Qty. Per Pkg.	Blade Pkg. No.	Teeth Per Inch	SAVE 5%		SAVE 10%		3/32 to 1/8		3/32 to 1/8		3/32 to 1/8	
				Qty. Per Pkg.	Bulk Pk. (100 Blde.)	Qty. Per Pkg.	Bulk Pk. (100 Blde.)	1/8 to 1/4	1/4 to 3/4	1/8 to 1/4	1/4 to 1/2	1/8 to 1/4	1/4 to 1/2
45273-1	1	45273-5	5	—	—	—	10						
45275-1	1	45275-5	5	45275-100	100	14							
45277-1	1	45277-5	5	45277-100	100	18		X		X			
		45279-5	5	—	—	24					X		

44-7/8" Long Bi-Metal Blades for use with Porter-Cable Models 724, 725, 726, 736, 738 and 7721.  
Also fits Black & Decker Models 3122, 3123; Milwaukee Models 6225, 6226;  
Ridge Models 941, 942, 943; Greenlee Model 530.

## Carbon Steel Blades

BAND SAW SPEED				USE SINGLE SPEED BAND SAW OR HIGHER SPEEDS ON 2-SPEED AND VARIABLE SPEED BAND SAW				USE LOWER SPEEDS ON 2-SPEED OR VARIABLE SPEED BAND SAWS					
MATERIAL TO BE CUT				ALUMINUM-BRASS-MAGNESIUM-COPPER-BRONZE-MILD STEEL		ANGLE IRON-CAST IRON-GALVANIZED PIPE		CHROME AND TUNGSTEN STEELS-PROBLEM MATERIALS		STAINLESS STEEL		ELECTRICAL INSULATED CABLE-FIBER GLASS-ASBESTOS-PLASTICS	
Blade Pkg. No.	Qty. Per Pkg.	Blade Pkg. No.	Teeth Per Inch	SAVE 5%		SAVE 10%		3/32 to 1/8		3/32 to 1/8		3/32 to 1/8	
				Qty. Per Pkg.	Bulk Pk. (100 Blde.)	Qty. Per Pkg.	Bulk Pk. (100 Blde.)	1/8 to 1/4	1/4 to 3/4	1/8 to 1/4	1/4 to 1/2	1/8 to 1/4	1/4 to 1/2
45242-3	3	45242-10	10	—	—	10							
45244-3	3	45244-10	10	—	—	14							
45248-3	3	45248-10	10	—	—	18							
45250-3	3	45250-10	10	—	—	24		X					

44-7/8" Long Carbon Steel Blades for use with Porter-Cable Models 724, 725, 726, 736 and 7721.  
Also fits Black & Decker Models 3122, 3123; Milwaukee Models 6225, 6226;  
Ridge Models 941, 942, 943; Greenlee Model 530.

**PORTER-CABLE LIMITED  
ONE YEAR WARRANTY**

Porter-Cable warrants its Professional Power Tools for a period of one year from the date of original purchase. We will repair or replace at our option, any part or parts of the product and accessories covered under this warranty which examination proves to be defective in workmanship or material during the warranty period. For repair or replacement return the complete tool or accessory, transportation prepaid, to your nearest Porter-Cable Service Center or Authorized Service Station as listed under "TOOLS-ELECTRIC" in the Yellow Pages of your telephone directory. Proof of purchase may be required. This warranty does not apply to repair or replacement required due to misuse, abuse, normal wear and tear or repairs attempted or made by other than our Service Centers or Authorized Service Stations.

To obtain information on warranty performance please write to: PORTER-CABLE CORPORATION, 4825 Highway 45 North, P.O. Box 2468, Jackson, Tennessee 38302-2468; Attention: Product Service. The foregoing obligation is Porter-Cable's sole liability under this or any implied warranty and under no circumstances shall Porter-Cable be liable for any incidental or consequential damages. Some states do not allow limitations on how long an implied warranty lasts on the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.



## PORTER-CABLE SERVICE CENTERS

Parts and Repair Service for Porter-Cable Power Tools are Available at These Locations

### CALIFORNIA

City of Industry 91745 (Los Angeles)  
1305 John Reed Court  
Phone: (818) 333-3566  
Fax: (818) 330-5900

San Leandro 94577 (Oakland)  
3039 Teagarden Street  
Phone: (510) 357-9762  
Fax: (510) 357-7939

### COLORADO

Denver 80204  
2561 West 8th Avenue  
Phone: (303) 892-6113  
Fax: (303) 595-0358

### FLORIDA

Hialeah 33014 (Miami)  
16373-75 NW 57th Ave.  
Phone: (305) 624-2523  
Fax: (305) 628-2654

Tampa 33609  
4538 W. Kennedy Boulevard  
Phone: (813) 877-9585  
Fax: (813) 289-7948

### GEORGIA

Morrow 30260 (Atlanta)  
1286 Citizens Parkway  
Suite C  
Phone: (404) 961-0900  
Fax: (404) 961-8624

### ILLINOIS

Addison 60101 (Chicago)  
311 Laura Drive  
Phone: (708) 628-6100  
Fax: (708) 628-0023

### MARYLAND

Baltimore 21227  
7397 Washington Blvd.  
Suite #102  
Phone: (410) 799-9394  
Fax: (410) 799-9398

### MASSACHUSETTS

Franklin 02038 (Boston)  
Franklin Industrial Park  
101 E Constitution Blvd.  
Phone: (508) 520-8802  
Fax: (508) 528-8089

### MICHIGAN

Southfield 48075 (Detroit)  
18650 W. Eight Mile Road  
Phone: (313) 569-4333  
Fax: (313) 569-4337

### MINNESOTA

Minneapolis 55429  
4315 68th Avenue North  
Phone: (612) 561-9080  
Fax: (612) 561-0653

### MISSOURI

North Kansas City 64116  
1141 Swift Avenue  
P.O. Box 12393  
Phone: (816) 221-2070  
Fax: (816) 221-2897

### ST. LOUIS

63119  
7574 Watson Road  
Phone: (314) 968-8950  
Fax: (314) 968-2790

### NEW YORK

Flushing 11365-1595 (N.Y.C.)  
175-25 Horace Harding Expwy.  
Phone: (718) 225-2040  
Fax: (718) 423-9619

### NORTH CAROLINA

Charlotte 28209  
4303-B South Boulevard  
Phone: (704) 525-4410  
Fax: (704) 525-0618

### OHIO

Columbus 43214  
4560 Indianola Avenue  
Phone: (614) 263-0929  
Fax: (614) 263-1238

### CLEVELAND

44125  
8001 Sweet Valley Dr.,  
Unit #18  
Phone: (216) 447-9030  
Fax: (216) 447-3097

### PENNSYLVANIA

Philadelphia 19154  
12285 McNulty Road  
Phone: (215) 677-7800  
Fax: (215) 677-9908

### TEXAS

Dallas 75220  
10720 N. Stemmons Freeway  
Phone: (214) 353-2996  
Fax: (214) 350-3943

### HOUSTON

77092  
5201 Mitchelldale B-9  
Phone: (713) 682-0334  
Fax: (713) 682-4867

### WASHINGTON

Renton 98055 (Seattle)  
268 Southwest 43rd Street  
Phone: (206) 251-6680  
Fax: (206) 251-9337

Authorized Service Stations are located in all large cities. For the one nearest you, see the classified section in your phone book (under "Tools-Electric").

## DELTA SERVICE CENTRES (CENTRES D'ENTRETIEN DELTA)

### ALBERTA

#10 6320 11th Street S.E.  
Calgary, Alberta  
T2H 2L7  
Phone: (403) 255-3530  
Fax: (403) 258-0767

### BRITISH COLUMBIA

8520 Baxter Place  
Burnaby, B.C.  
V5A 4T8  
Phone: (604) 420-0102  
Fax: (604) 420-3522

### MANITOBA

1699 Dublin Avenue  
Winnipeg, Manitoba  
R3H 0H2  
Phone: (204) 633-9259  
Fax: (204) 632-1976

### ONTARIO

644 Imperial Road  
Guelph, Ontario  
N1H 6M7  
Phone: (519) 836-2840  
Fax: (519) 836-9352

### 40 West Pearce St.

Unit #2  
Richmond Hill, Ontario  
L4B 1E3  
Phone: (416) 771-6111  
Fax: (416) 771-6831

### QUÉBEC

523 Rue Deslauriers  
St. Laurent, (Montréal) P.Q.  
H4N 1W2  
Phone: (514) 336-8772  
Fax: (514) 336-3505

### Suite 202

2022 Rue Lavoisier  
Ste. Foy, Québec, Québec  
G1N 4L5  
Phone: (418) 681-7305  
Fax: (418) 681-1695

Authorized Service Stations are located in many large cities. For the one nearest you, see the classified section in your phone book (under "Tools-Electric").

PORTER-CABLE®, HAMMER-HEAD®, OMNIJIG®, PORTA-BAND®, PORTA-PLANE®,  
VERSA-PLANE®, SAW BOSS®, SPEED-BLOC®, SPEEDMATIC®, SPEEDTRONIC®,  
STAIR-EASE®, DURATRONIC™, LASERLOC™, MICRO-SET™, MORTEN™, POCKET  
CUTTER™, PRODUCTION CLASS™, QUICKSAND™, SANDTRAP™, THE  
PROFESSIONAL EDGE™, TIGER™ SAW, TIGER CUB™, TRU-MATCH™ are trademarks  
of Porter-Cable Corporation.

Copyright © 1992 Porter-Cable Corporation

Printed in U.S.A.