

Cordless Driver/Drill

Perceuse/Visseuse à Piles à Deux Vitesses

Taladro/Destornillador de Dos Velocidades

MODELS 820, 822, 824, 826

www.porter-cable.com
Copyright © 2005 Porter-Cable

Instructive de operation,
centro de servicio y poliza de garantía.
ADVERTENCIA: Lease este instructivo antes de usarlo producto.

Part No. A14966 - 11-08-05 - Rev A

SAVE THESE INSTRUCTIONS!

WARNING Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

SAFETY INSTRUCTIONS FOR ALL TOOLS

- Work area safety
 - Keep work area clean and well lit. Cluttered or dark areas invite accidents.
 - Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
 - Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock. Use only 3-wire extension cords that have 3-prong grounding-type plugs and 3-pole receptacles that accept the tool's plug.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

Personal safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Avoid accidental starting. Ensure the switch is in the off-position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools will have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust-related hazards.

Power tool use and care

- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other conditions that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

Service

- Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

SPECIFIC SAFETY RULES

Wear ear protectors with drills. Exposure to noise can cause hearing loss.
Use auxiliary hands supplied with the tool. Loss of control can cause personal injury.
Hold power tools by insulated gripping surfaces when performing an operation where the

cutting tool contact hidden wiring or its own cord. Contact with a "live" wire will make exposed metal parts of the tool "live" and shock the operator.
Verify the direction of rotation before starting the tool. Never attempt to change direction of rotation while switch is "ON" or do so by changing internal direction built into switch. Be sure switch is "OFF" and motor has completely stopped before changing direction of rotation.

CAUTION Wear appropriate hearing protection during use. Under some conditions and duration of use, noise from this product may contribute to hearing loss.
WARNING Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paint,
 - crystalline silica from bricks and cement and other masonry products,
 - arsenic and chromium from chemically-treated lumber (CCA).
- Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these dusts, wear a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

WARNING Avoid prolonged contact with dust from power sanding, sawing, grinding, drilling, and other construction activities. Wear protective clothing and wash exposed areas with soap and water. Always dust to get into your mouth, eyes, or lay on the skin may promote absorption of harmful chemicals.

WARNING Use of this tool can generate and/or disburse dust, which may cause serious and permanent respiratory or other injury. Always use NIOSH/OSHA approved respiratory protection appropriate for the dust exposure. Direct particles away from face and body.

The label on your tool may include the following symbols:

V.....volts
Hz.....hertz
min.....minutes
----- direct current
□.....class II tool
/min.....revolutions per minute

A.....amps
W.....watts
~ or a.c.alternating current
No.....no load speed
⊕.....protective earth

SAFETY INSTRUCTIONS FOR CHARGER AND BATTERIES

The battery pack is not fully charged out of the carton. Before using the battery pack and charger, read these safety instructions. Be sure to follow all of the charging procedures.

READ ALL INSTRUCTIONS

- Do not incinerate the battery pack even if it is severely damaged or is completely worn out. The battery pack can explode in a fire.
- A small leakage of liquid from the battery pack cells may occur under extreme usage or temperature conditions. This does not indicate a failure. However, if the outer seal is broken and this leakage gets on your skin:
 - Wash quickly with soap and water.
 - Neutralize with a mild acid such as lemon juice or vinegar.
 - If battery liquid gets into your eyes, flush them with clean water for a minimum of 10 minutes and seek immediate medical attention. (Medical note: The liquid is 25-35% solution of potassium hydroxide.)
- Charge the battery packs only in Porter-Cable chargers.
- DO NOT splash or immerse in water or other liquids.
- Do not store or use in the tool and battery pack in locations where the temperature may reach or exceed 105°F (such as outside sheds or metal buildings in summer).

DANGER Electroction hazard. Never attempt to open the battery pack for any reason. If battery pack case is cracked or damaged, do not insert into charger. Electric shock or electrocution may result. Damaged battery packs should be returned to service center for recycling.

The RBRC™ Seal

The RBRC™ (Rechargeable Battery Recycling Corporation) Seal on the nickel-cadmium battery (or battery pack) indicates that the costs to recycle the battery (or battery pack) at the end of its useful life have already been paid by Porter-Cable. In some areas, it is illegal to place spent nickel-cadmium batteries in household or municipal solid waste stream and the RBRC program provides an environmentally conscious alternative.

RBRC™ in cooperation with Porter-Cable and other battery users, has established programs in the United States to facilitate the collection of nickel-cadmium batteries from their users and environment and conserve natural resources by returning the spent nickel-cadmium battery to an authorized Porter-Cable service center or to your local retailer for recycling. You may also contact your local recycling center for information on where to drop off the spent battery. RBRC™ is a registered trademark of the Rechargeable Battery Recycling Corporation.

Important Safety Instructions for Battery Chargers

SAVE THESE INSTRUCTIONS: This manual contains important safety instructions for battery chargers.

Before using charger, read all instructions and cautionary markings on charger, battery pack, and product using battery pack.

DANGER Electroction hazard. 120 volts are present at charging terminals. Do not probe with conductive objects.

CAUTION Burn hazard. To reduce the risk of injury, charge only DeWALT nickel cadmium rechargeable batteries. Other types of batteries may burst causing personal injury and damage.

CAUTION Under certain conditions, with the charger plugged in to the power supply, the exposed charging contacts inside the charger can be shorted by foreign material. Foreign materials of a conductive nature such as, but not limited to, steel wool, aluminum foil, or any buildup of metallic particles should be kept away from charger cavities. Always unplug the charger from the power supply when there is no battery pack in the cavity. Unplug charger before attempting to clean.

- DO NOT** attempt to charge the battery pack with any chargers other than the ones in this manual. The charger and battery pack are specifically designed to work together.
- These chargers are **not intended for any uses other than charging Porter-Cable rechargeable batteries.** Any other uses may result in risk of fire, electric shock or electrocution.

- DO NOT** allow charger to get wet.
- DO NOT ABUSE CORD.** Never carry charger by cord or yank to disconnect from receptacle. Pull by plug rather than cord when disconnecting charger. This will reduce risk of damage to electric plug and cord. Have damaged or worn power cord and strain relief replaced immediately.

- Make sure that cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.**
- DO NOT** use an extension cord unless it is absolutely necessary. Use of improper extension cord could result in risk of fire, electric shock, or electrocution.

- An extension cord must have adequate wire size (AWG or American Wire Gauge) for safety.** The smaller the gauge number of the wire, the greater the capacity of the cable, that is 16 gauge has more capacity than 18 gauge. When using more than one extension to match up the total length, be sure each individual extension contains at least the minimum wire size. If an extension cord is to be used outdoors it must be marked with the suffix W-A or F following the cord type designation. For example - SJTW-A to indicate it is acceptable for outdoor use.

| Recommended Minimum Wire Size for Extension Cords | | | | | | | |
|---|--------|--------|--------|---------|---------|---------|---------|
| Total Length of Cord | 25 ft. | 50 ft. | 75 ft. | 100 ft. | 125 ft. | 150 ft. | 175 ft. |
| 7.6 m | 15.2 m | 22.9 m | 30.5 m | 38.1 m | 45.7 m | 53.3 m | |
| Wire Size AWG | 18 | 18 | 16 | 16 | 14 | 14 | 12 |

- Do not place any object on top of charger or place the charger on a soft surface that might block the ventilation slots and increase internal heat.** Place the charger in a position away from any heat source. The charger is ventilated through slots in the top and the bottom of the housing.
- Do not operate charger with damaged cord or plug** — have them replaced immediately.
- Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way.** Take it to an authorized service center.
- Do not disassemble charger; take it to an authorized service center when service or repair is required.** Incorrect assembly may result in a risk of electric shock, electrocution or fire.
- Disconnect the charger from the outlet before attempting any cleaning.** This will reduce the risk of electric shock. Removing the battery pack will not reduce this risk.
- NEVER attempt to connect 2 chargers together.**
- The charger is designed to operate on standard household electrical power (120 Volts).** Do not attempt to use it on any other voltage. This does not apply to the vehicular charger.

FUNCTIONAL DESCRIPTION

FOREWORD

Your Porter-Cable Cordless Driver/Drill is designed to drill holes and drive fasteners in various materials as indicated in the following chart:

| SPEED RANGE | MAXIMUM CAPACITIES | | | | DRIVING WOOD SCREWS |
|-------------|--------------------|-----------|--------------------|--|---------------------|
| | MILD STEEL | ALUMINIUM | WOOD SELF-FEED BIT | | |
| LOW | 3/8" | 3/8" | 1" | | 3/8" |
| HIGH | 3/8" | 3/8" | 1/2" | | #10 |

OPERATION

SWITCH OPERATION

Squeeze the trigger switch (A) Fig. 1 to start the motor. Release the trigger switch to stop the motor.

NOTE: As the trigger switch is squeezed, the motor speed increases. A low-voltage, high-pitched tone is normal when the tool is in the variable speed mode.

TO PLACE THE TOOL IN FORWARD OR REVERSE

Place the trigger switch (A) Fig. 1 in the "OFF" position before changing the direction of rotation.

- Push the button (B) Fig. 1 toward the left side of the drill for clockwise (forward) rotation.
- Push the button (B) toward the right side of the drill for counter-clockwise (reverse) direction.
- Place the button (B) in the center position to lock the trigger switch in the "OFF" position.

ELECTRIC BRAKE

When the trigger switch (A) Fig. 1 is released, an electric brake automatically stops the spindle rotation.

INSTALLING AND REMOVING DRILL AND SCREWDRIVER BITS

CAUTION Place the button (B) Fig. 1 in the center position (locked in the "OFF" position) before installing or removing bits.

- The three-jaw chuck will self-center the bit. Open the jaws by turning the outer sleeve (A) Fig. 2 counter-clockwise when viewing the chuck from the bit end.
- Clean and insert the smooth end of the bit as far as it will go into the chuck, or up to the flutes for small bits.
- Hold the bit with one hand and turn the outer sleeve (A) clockwise until the chuck grips the bit.
- Tighten the chuck securely by holding the chuck ring (B) with one hand and turn the outer sleeve (A) clockwise with the other hand.

WARNING DO NOT operate the drill motor when installing or removing bits. The bit can be thrown from the chuck, causing personal injury.

ADJUSTING THE TORQUE COLLAR

The clutch unit provides twenty clutch settings plus a "Drill" (lock)-lockup setting. The lowest torque is setting #1 with the maximum torque at the "Drill" setting. You can adjust the amount of output torque by rotating the front collar (A) Fig. 3, so that the desired torque setting is aligned with the index mark (B) Fig. 3. Lower torque settings are usually used for driving small screws and other delicate work, while higher torque settings drive larger screws. The "Drill" position is used for drilling and for driving very large screws.

USING THE TWO-SPEED GEAR SWITCH

The Models 820, 822, 824, and 826 Cordless Driver/Drills have a two-speed gear that provides spindle speed ranges as shown in the following chart:

| Model | Low | High |
|-------|-------|--------|
| 820 | 0-300 | 0-1100 |
| 822 | 0-400 | 0-1200 |
| 824 | 0-400 | 0-1250 |
| 826 | 0-450 | 0-1450 |

To change speed ranges, release the trigger switch to stop the motor and slide the speed selector (A) Fig. 4 toward the rear for HIGH speed or toward the front for LOW speed.
The low speed position is normally used when drilling larger holes and when driving or removing screws. The high speed position is normally used for drilling small holes.

BIT STORAGE

The models 822, 824, and 826 have a clip (B) Fig. 4 and the model 820 has a clip (B) Fig. 5 for storing bits.

BATTERY PACK AND CHARGER OPERATION

CHARGING THE BATTERY PACK

Before using your cordless Driver/Drill for the first time, fully charge the battery pack. If the battery pack is installed in the Driver/Drill, remove it by following the instructions under "INSTALLING OR REMOVING THE BATTERY PACK".

As a battery pack approaches the discharged state, you will notice a sharp drop in tool performance. When the tool is unable to perform, recharge the battery pack. Recharging prior this point will reduce the life of the pack. Discharging the pack beyond this point will damage the pack.

NOTE: Battery temperature will increase during and shortly after use. Allow the battery pack to cool to room temperature before charging for best results.

The battery charger may rest on the four pads provided on the bottom of the case or be mounted on a wall by utilizing the two key hole slots provided.

CAUTION DO NOT OBSTRUCT the vent slots in the top and bottom of the charger. Do not charge the battery when the temperature is BELOW 40°F or ABOVE 104°F.

NORMAL CHARGING

DANGER Electroction hazard. 120 volts are present at charging terminals. Do not probe with conductive objects.

Make sure that the power circuit voltage is the same as that shown on the charger specification plate. Connect the charger to the power source. The green light (A) Fig. 6 will begin to flash.

Align the rails (A) Fig. 7 on the battery pack with the four tabs (C) Fig. 6 on the charger. Slide the battery forward on the charger until it stops.

The green light (A) Fig. 6 will begin to glow continuously, indicating that the battery pack is receiving a "Fast Charge".

NOTE: If the green light does not glow continuously, or if the red light (B) Fig. 6 also begins to flash, see "DIAGNOSTICS". After approximately one hour, the "Fast Charge" indicator light should disappear, indicating that the battery pack is charged and that the charger is in the "Trickle Charge" mode. The "Fast Charge" mode is intended for use with fully charged batteries. Any loss of power before the above maintenance check may indicate the need for immediate servicing of your tool. DO NOT CONTINUE TO OPERATE TOOL UNDER THIS CONDITION. If proper operating voltage is present, return your tool to the service station for immediate service.

Disconnect the charger from the power source when not in use.

DIAGNOSTICS

The Model 8605 Charger is equipped with a diagnostic system that automatically checks the battery pack each time a pack is inserted. If no problems are found, the charger will automatically switch to "Fast Charge" mode, and will begin charging when the temperature reaches an acceptable level.

A continuously flashing green light (A) Fig. 6 indicates that the battery pack temperature is either too high or too low for charging. If left alone, the charger will continue to monitor the battery pack temperature, and will begin charging when the temperature reaches an acceptable level.

A continuously glowing green light (A) and a flashing red light (B) indicates that the battery pack is receiving a "Fast Charge", but that the battery pack voltage is low. A new or a fully discharged battery pack may give this indication for the first several minutes. If the red light continues to flash throughout the charge cycle, the pack is weak and will provide reduced performance. (The pack is still useable, but will not provide maximum power or work per charge). This battery pack will probably require replacement in the near future.

A continuously flashing green and red light (A) and (B) indicates that the battery pack has failed. This pack is not chargeable and requires replacement.

INSTALLING OR REMOVING THE BATTERY PACK

To remove the battery pack, depress the battery release button (B) Fig. 7 and pull the battery pack out of the tool.

To install the battery pack, align the rails (A) Fig. 7 on battery pack with the slots on the tool and push battery pack on the tool until it locks in place.

WARNING The front end of the driver/drill may become "live" if the tool drills into live wiring in the wall. To prevent accidental shock, hold the tool as shown in Fig. 8.

NOTE: Make sure your battery pack is fully charged.

CAUTION Lock trigger switch before adjusting or installing battery.

OPERATION AS A DRILL

Turn the collar to the drill bit symbol. Install and tighten the desired drill bit in the chuck. Select the desired speed/torque range using the gear shifter to match the speed and torque to the planned operation.

For WOOD, use twist bits, spade bits, power auger bits or hole saws. For METAL, use high-speed steel twist drill bits or hole saws. Use a cutting lubricant when drilling metals. The exceptions are cast iron and brass which should be drilled dry. For MASONRY, use carbide-tipped bits or masonry bits. A smooth, even flow of dust indicates the proper drilling rate.

Always apply pressure in a straight line with the bit. Use enough pressure to keep the drill bit biting, but do not push hard enough to stall the motor or deflect the bit.

Hold the tool firmly with both hands to control the twisting action of the drill.

If the DRILL STALLS, it is usually because it is being overloaded. RELEASE THE TRIGGER IMMEDIATELY, remove the drill bit from work, and determine the cause of stalling. DO NOT CLICK THE TRIGGER OFF AND ON IN AN ATTEMPT TO START A STALLED DRILL—THIS CAN DAMAGE THE DRILL.

Keep the motor running when backing a bit out of a drilled hole. This will help prevent jamming.


OPERATION AS A SCREWDRIVER

Select the desired speed/torque range using the 2 speed gear shift lever on the top of tool to match the speed and torque to the planned operation. Insert the desired fastener accessory into the chuck as you would any drill bit. Set the torque adjusting collar (A) Fig. 8. Make a few practice runs in scrap or unseen areas to determine the proper position of the clutch collar.

For assistance with your tool, visit our website at www.porter-cable.com for a list of service centers, or call the Porter-Cable Customer Care Center at 1-800-223-7278.

KEEP TOOL CLEAN

Periodically blow out all air passages with dry compressed air. All plastic parts should be cleaned

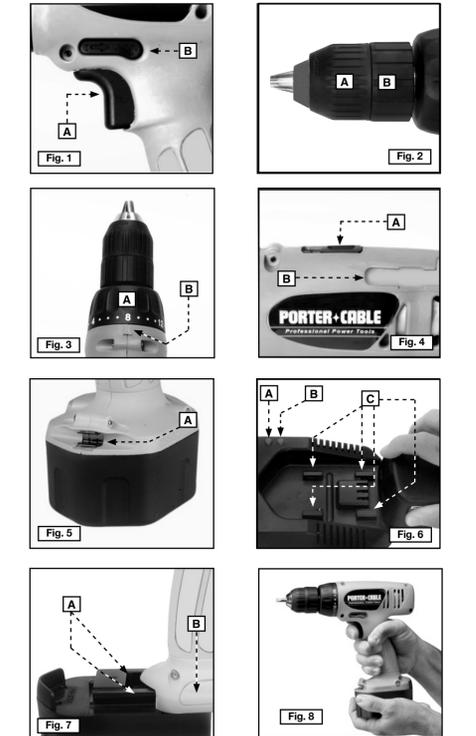

with a soft damp cloth. NEVER use solvents to clean plastic parts. They will possibly dissolve or otherwise damage the material.

CHARGER CLEANING INSTRUCTIONS

WARNING Wear ANSI Z87.1 safety glasses while using compressed air.

WARNING Shock hazard. Disconnect the charger from the AC outlet before cleaning. Dirt and grease may be removed from the exterior of the charger using a cloth or soft non-metallic brush. Do not use water or any cleaning solutions.

FULLER TO START

Should your tool fail to start, check the forward/reverse button. If it still fails to start, check the battery (See "BATTERY PACK AND CHARGER INFORMATION").

LUBRICATION

This tool has been lubricated with a sufficient amount of high grade lubricant for the life of the unit under normal operating conditions. No further lubrication is necessary.

BRUSH INSPECTION (If applicable)

For your continued safety and electrical protection, brush inspection and replacement on this tool should ONLY be performed by an AUTHORIZED PORTER-CABLE SERVICE STATION or a PORTER-CABLE-DELTA FACTORY SERVICE CENTER.

At approximately 100 hours of use, take or send your tool to your nearest authorized Porter-Cable Service Station to be thoroughly cleaned and inspected. Have worn parts replaced and lubricated with fresh lubricant. Have new brushes installed, and test the tool for performance.

Any loss of power before the above maintenance check may indicate the need for immediate servicing of your tool. DO NOT CONTINUE TO OPERATE TOOL UNDER THIS CONDITION. If proper operating voltage is present, return your tool to the service station for immediate service.

REPLACEMENT PARTS

Use only identical replacement parts. For a parts list or to order parts, visit our website at www.porter-cable.com. You can also order parts from your nearest factory-owned branch, or by calling our Customer Care Center at 1-800-223-7278 to receive personalized support from highly-trained technicians.

SERVICE AND REPAIRS

All quality tools will eventually require servicing and/or replacement of parts. For information about Porter-Cable factory-owned branches, or an Authorized Warranty Service Center, visit our website at www.porter-cable.com or call our Customer Care Center at 1-800-223-7278. All repairs made by our service centers are fully guaranteed against defective material and workmanship. We cannot guarantee repairs made or attempted by others.

You can also write to us for information at PORTER-CABLE, 4825 Highway 45 North, Jackson, Tennessee 38305. Attention: Product Service. Be sure to include all of the information shown on the nameplate of your tool (model number, type, serial number, etc.).

The charger is not user serviceable. There are no user serviceable parts inside the charger. Servicing at an authorized service center is required to avoid damage to static sensitive internal components.

ACCESSORIES

A complete line of accessories is available for your Porter-Cable-Delta Supplier, Porter-Cable-Delta Factory Service Centers, and Porter-Cable Authorized Service Stations. Please visit our Web Site www.porter-cable.com for a catalog or for the name of your nearest supplier.

WARNING Since accessories other than those offered by Porter-Cable-Delta have not been tested with this product, use of such accessories could be hazardous. For safest operation, only Porter-Cable-Delta recommended accessories should be used with this product.

WARRANTY

To register your tool for warranty service visit our website at www.porter-cable.com.

PORTER-CABLE LIMITED ONE YEAR WARRANTY: Porter-Cable warrants its Professional Power Tools for a period of one year from the date of original purchase. We will repair or replace at our option, any part or parts of the product and accessories covered under this warranty which, after examination, proves to be defective in workmanship or material during the warranty period. For repair or replacement return the complete tool or accessory, transportation prepaid, to your nearest Porter-Cable Service Center or Authorized Service Station. Proof of purchase may be required. This warranty does not apply to repair or replacement required due to misuse, abuse, normal wear and tear or repairs attempted or made by other than our Service Centers or Authorized Service Stations.

ANY IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WILL LAST ONLY FOR ONE (1) YEAR FROM THE DATE OF PURCHASE.

To obtain information on warranty performance please write to: PORTER-CABLE, 4825 Highway 45 North, Jackson, Tennessee 38305; Attention: PRODUCT SERVICE. THE FOREGOING OBLIGATION IS PORTER-CABLE'S SOLE LIABILITY UNDER THIS OR ANY IMPLIED WARRANTY AND UNDER NO CIRCUMSTANCES SHALL PORTER-CABLE BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

CONSERVER CES DIRECTIVES!

RÈGLES

